




## INSTALLATION MANUAL

# **ELITE GV 2, GV 3, GV 3+, ELITE GV 8, GV 10, GV 12 and ELITE GV 15 genverters for mobile use**

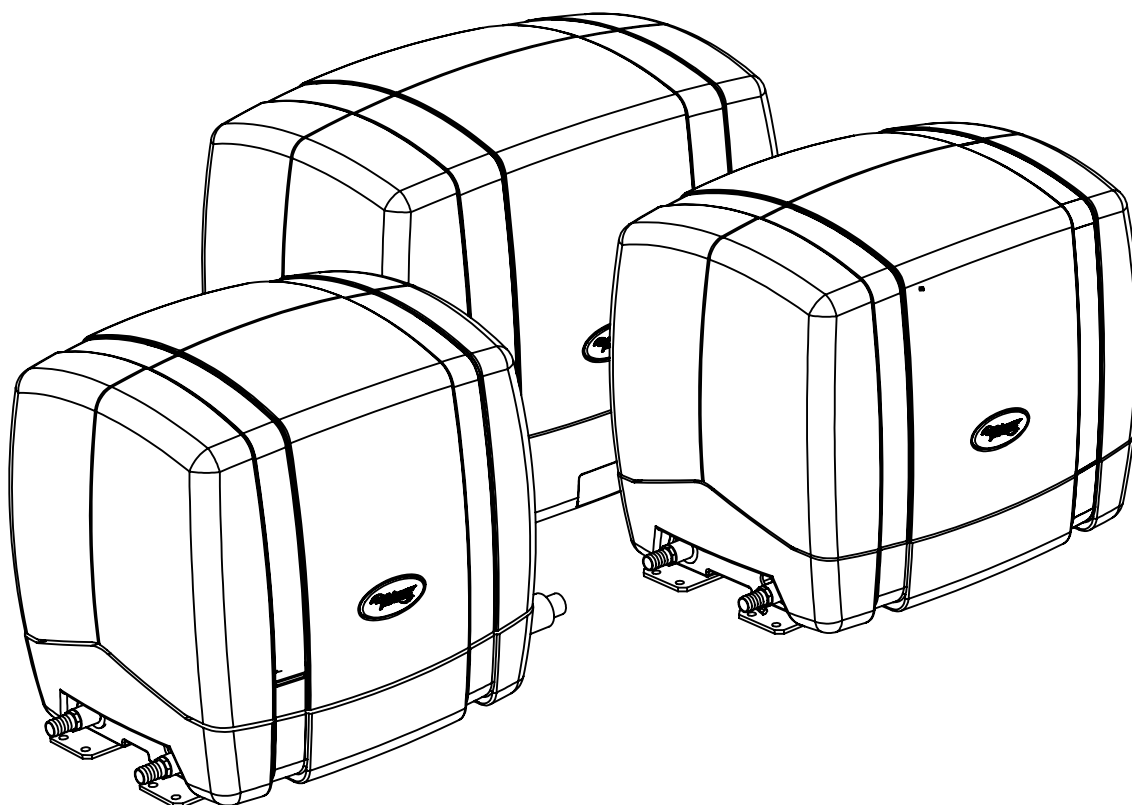

## CONTENTS

<b>1</b>	<b>INTRODUCTION .....</b>	<b>3</b>
1.1	Use of this manual.....	3
1.2	Validity of this manual .....	3
1.3	Installation parts .....	3
1.4	Generators on vehicles.....	4
<b>2</b>	<b>INSTALLATION .....</b>	<b>5</b>
2.1	General.....	5
2.2	Location.....	5
2.3	Protection against dirt, sand and bad weather conditions.....	5
2.4	Sound and vibration reduction .....	5
2.4.1	Further recommendations .....	5
2.5	Ventilation.....	6
2.6	Connections .....	6
2.7	Fuel supply .....	7
2.7.1	Fuel tank.....	7
2.7.2	Fuel lift pump .....	8
2.7.3	Fuel pipes .....	8
2.7.4	Fuel filters.....	8
2.8	Radiator cooling .....	8
2.8.1	General instructions .....	8
2.8.2	How and where to mount the radiator .....	8
2.8.3	Bottom-mounted radiator.....	8
2.8.4	Side-mounted radiators.....	9
2.8.5	Roof-mounted radiators.....	9
2.8.6	How and where to mount the expansion tank.....	9
2.9	Dry exhaust system .....	10
2.9.1	General remarks .....	10
2.9.2	The standard dry exhaust system.....	11
2.9.3	Installation of the exhaust.....	11
<b>3</b>	<b>ELECTRICAL INSTALLATION .....</b>	<b>12</b>
3.1	Digital Diesel Control system .....	12
3.2	Remote control .....	12
3.3	Acoustic alarm or warning lamp .....	12
3.4	Connection for emergency stop / fire alarm switch.....	12
3.5	Automatic starting and stopping.....	13
3.5.1	General .....	13
3.5.2	Start/stop by external switch .....	13
3.6	Starter battery.....	13
3.7	Other recommendations and warnings .....	13
3.8	Alternating current.....	14
3.9	Fuse .....	14
3.10	Grounding .....	14
3.11	Cable .....	14
<b>4</b>	<b>INSTALLATION SUMMARY .....</b>	<b>15</b>
4.1	General.....	15
4.2	Commissioning table .....	15
4.3	Technical data .....	15
4.4	Specification of the accessories .....	15
4.5	Exhaust kits .....	16
4.5.1	1" Dry exhaust .....	16
4.5.1	1½" Dry exhaust .....	18
4.6	Fuel kit.....	17
4.7	Battery installation kit.....	19
4.8	230VAC radiator kit .....	21
4.8.1	Radiator kit for Elite GV/2, Elite GV 8, Elite GV/3, Elite GV 10 and Elite GV12.....	21
4.8.2	Radiator kit for Elite GV/3 and Elite GV 15 .....	21
<b>5</b>	<b>DIAGRAMS &amp; DRAWINGS .....</b>	<b>23</b>
5.1	System diagrams .....	23
5.2	Mechanical drawings .....	28

# 1 INTRODUCTION

## 1.1 USE OF THIS MANUAL

This manual serves as a guideline for the safe and effective installation of the WhisperPower two and three cylinder genverters for mobile applications.

It is obligatory that every person who is involved with the installation of the genverter must be completely familiar with the contents of this manual, and that he/she carefully follows the instructions contained herein.

To ensure reliability and durability of the equipment, it is very important that the installation is carried out with the utmost care and attention. To avoid problems, such as temperature problems, noise levels, vibration, etc. the instructions set out in this manual must be followed and all installation work must be carried out only by qualified, authorized and trained personnel, consistent with the locally applicable standards and taking into consideration the safety guidelines and measures (Chapter 2 of the user's manual).

The information, specifications, illustrations and statements contained within this publication are given with our best intentions and are believed to be correct at the time of going to press.

Our policy is one of continued development and we reserve the right to amend any technical information without prior notice.

Whilst every effort is made to ensure the accuracy of the particulars contained within this publication neither the manufacturer, distributor, or dealer in any circumstances shall be held liable for any inaccuracy or the consequences thereof.

Keep this manual in a secure place!

## 1.2 VALIDITY OF THIS MANUAL

All of the specifications, provisions and instructions contained in this manual apply solely to standard versions of the two and three cylinder genverters delivered by WhisperPower.

This manual is valid for the following models:

### Description

ELITE GV 2	(Kubota Z482)
ELITE GV 3	(Kubota D722)
ELITE GV 3+	(Kubota D1105)
ELITE GV 8	(Kubota Z482)
ELITE GV 10	(Kubota D722)
ELITE GV 12	(Kubota D722)
ELITE GV 15	(Kubota D1105)

Refer to the user's manual for identification of the genverter. For other models see our website: [www.whisperpower.com](http://www.whisperpower.com).



### WARNING!

During installation and commissioning of the genverter, the Safety Guidelines & Measures are applicable at all times. See Chapter 2 of the user's manual.



### WARNING!

A warning symbol draws attention to special warnings, instructions or procedures which, if not strictly observed, may result in damage or destruction of equipment, severe personal injury or loss of life.



### DANGER!

This danger symbol refers to electric danger and draws attention to special warnings, instructions or procedures which, if not strictly observed, may result in electrical shock with possibly severe personal injury or loss of life.



### WARNING!

Before working on the system read the safety instructions in the user's manual.

## 1.3 INSTALLATION PARTS

Besides the parts that are included with the delivery you need at least the parts listed in 4.4 to install the genverter. Please note that this listing may not be complete, as every installation differs from the other. Oil is not included in the supply. Refer to the user's manual for the right specifications.

#### 1.4 GENVERTERS ON VEHICLES

On vehicles the engine is cooled by an external radiator with an electric driven fan (12VDC or 230VAC).

When the genverter is mounted inside the vehicle the radiator should blow out air through the wall (Figure 1). When this is not possible the radiator can better be mounted outside the canopy and outside the vehicle. This can be in the side, below or on top of the vehicle.

The exhaust is of the dry type and includes a stainless steel flexible bellow and high quality mufflers. Also the exhaust can be at the side, below or on top of the vehicle.

IT IS VERY IMPORTANT TO EVALUATE ALL PRO'S AND CONT'S BEFORE MAKING A CHOICE HOW TO SET UP THE INSTALLATION.

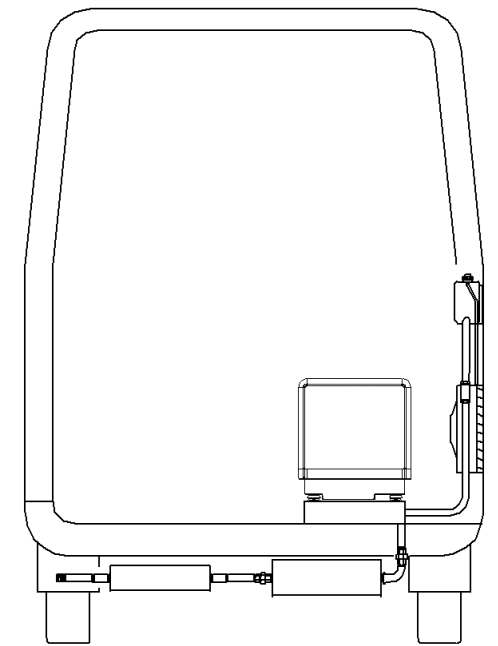


Figure 1: Radiator mounted in the side of the vehicle

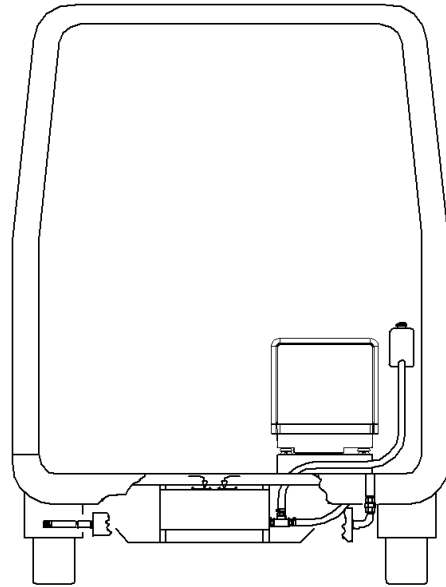


Figure 2: Radiator mounted below the vehicle

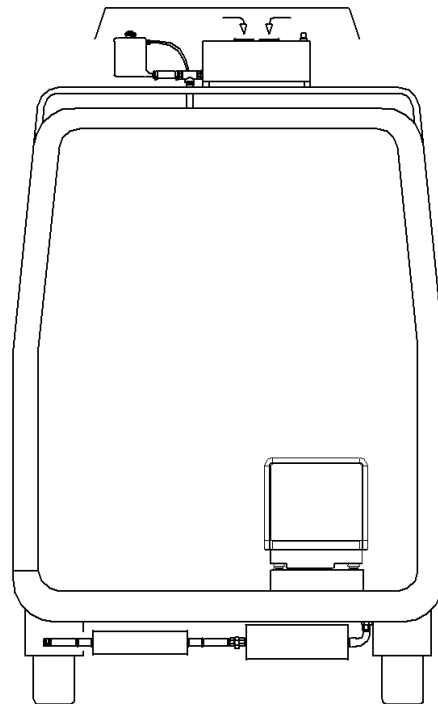


Figure 3: Radiator mounted on the roof of the vehicle

## 2 INSTALLATION

### 2.1 GENERAL

To ensure reliability and durability of the equipment, it is very important that the installation is carried out with the utmost care and attention. To avoid problems, such as temperature problems, noise levels, vibration, etc. the instructions set out in this manual must be followed and all installation work must be carried out professionally.



#### WARNING!

The genverter incorporates powerful permanent magnets. Cardiac patients, especially those living with a pacemaker, should bear this in mind.

### 2.2 LOCATION

When looking for a proper place for a genverter in a vehicle all relevant aspects have to be taken into account

- Accessibility
- Solid foundation
- Space to mount the radiator (refer to 2.8)
- Space to mount the exhaust (refer to 2.9)
- A route to fit the fuel lines
- The air flow through the genset (refer to 2.6)

Because of their small dimensions, WhisperPower genverters can be installed in tight locations. Please consider that even almost maintenance-free machinery must still remain accessible.


When selecting the location for the genverter, make sure there is sufficient room to carry out any maintenance work. The unit must be easily accessible on the service side. All models can be serviced from one side. Oil filling can be done on the service side and on the top. The top of the engine (rocker cover) has to be accessible for adjustment of the valve clearance.

Please also note that in spite of the automatic oil pressure switch the oil level must be checked regularly.

### 2.3 PROTECTION AGAINST DIRT, SAND AND BAD WEATHER CONDITIONS

The unit can be mounted below a vehicle. However, be aware of the bad conditions below a truck when driving in rain or snow.

Figure 4: Mounting of the WhisperPower genverter.

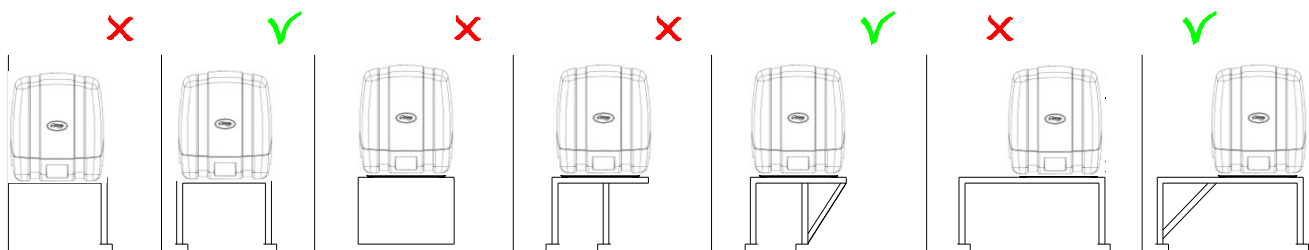

X = wrong, V = OK

Also protect the unit from a spray of water and/or mud behind the wheels. In some territories there is sand in the air. In such situations, it is recommended to fit the air inlet of the engine compartment with an air inlet strainer.

### 2.4 SOUND AND VIBRATION REDUCTION

Position the genverter as low as possible in the vehicle. The genverter is secured to the base frame inside the canopy by means of a flexible engine mountings system. This frame is must be solidly mounted in the vehicle, not using rubber mountings again. When it is possible to mount the unit directly on the chassis of the vehicle this has advantages in preventing vibrations by resonance.

#### 2.4.1 Further recommendations

WhisperPower genverters are standard equipped with a sound cover canopy. This sound cover has been designed to give effective sound insulation. For optimum sound and vibration dampening, the following factors should be considered.

- 1 Most importantly, the structure on which the genverter is placed must be stiff. Directly below the base frame, the structure should be supported vertically to the chassis of the vehicle. When this is not possible horizontal structures should be made stiff by additional provisions (Figure 4).
- 2 In larger vehicles a separate and insulated space for the genverter will help to dampen the noise even further.
- 3 Avoid mounting the genverter in close proximity to thin walls or floors that may cause resonance.
- 4 Sound dampening is extremely poor if the genverter is mounted on a light weight flimsy surface such as plywood which will only amplify vibrations. If mounting on a thinner surface cannot be avoided, this should be at least be reinforced with stiffening struts or ribbing. If possible, holes should be drilled or cut through the surface to help reduce the resonance. Covering the surrounding walls and floors with a heavy coating plus foam will certainly improve the situation.
- 5 Never connect the base of the genverter directly to walls or tanks (Figure 4).

## 2.5 VENTILATION

When not in the open air below a truck, the genverter normally draws air from the engine compartment. An engine compartment with natural ventilation must have vent openings of adequate size and location to enable the genverter set to operate without overheating. To allow an ample supply of air within the temperature limits of the genverter an opening of at least 900 cm<sup>2</sup> is required.

A "sealed" engine compartment must have a good extraction ventilator to maintain reasonable ambient temperatures. High temperature of intake air reduces engine performance and increases engine coolant temperatures. Air temperatures above 40°C reduce the engine power by 2% for each 5°C of rise. At higher temperatures the electric output will be lower. To minimize these effects the engine room temperature must not exceed the outside ambient air temperature by more than 15°C.

Apply a combination of ventilators, blowers and air intake ducting to meet the temperature limit. The air inlet ducts should run to the bottom of the engine compartment to clear fumes from the bottom and to circulate fresh air. Air outlets should be at the top of the engine compartment to remove the hottest air. An engine compartment blower should be used as an extraction ventilator to remove air from the engine room.

In cases where it is impossible to meet the above mentioned temperature limit by using engine compartment ventilation, connections are to be made for an air inlet directly to the genverter enclosure. With these connections the genverter can be directly connected to an air duct.

Air inlets should be louvered, where appropriate, to protect the engine room and to protect the genverter from rain and water spray.

## 2.6 CONNECTIONS

The genverter comes with all supply lines and output cables (i.e. electric cables, exhaust connection, fuel lines etc.) already connected. The supply lines are fed through the capsule's front base. The connections are marked as shown in Figures 5-8.



Refer to Section 5.1 for a graphical overview of installation and wiring connection requirements.

All electrical connections, cable types and sizes must comply with the appropriate national regulations. Supplied cables are rated for ambient temperatures up to 70°C. If the cables are required to meet higher temperature requirements, they must be run through conduits.



### ATTENTION!

Before working on the system, read the safety instructions.

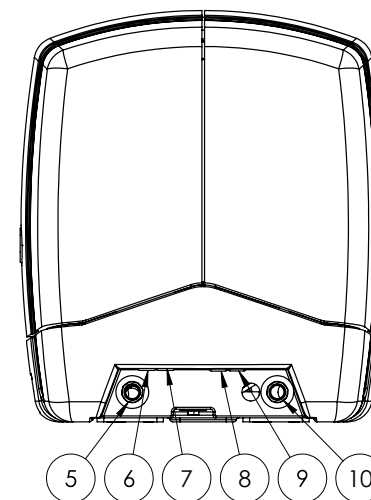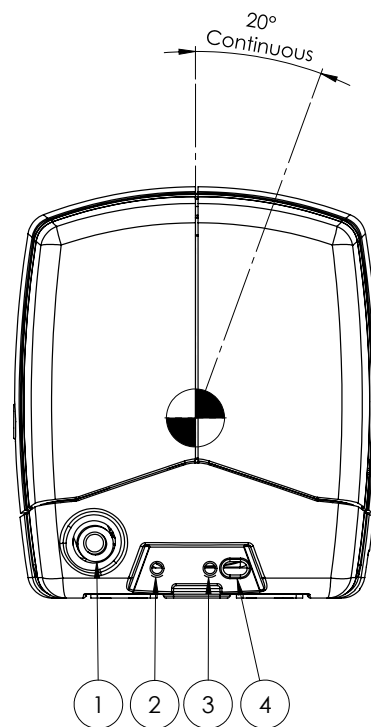

- 1 Exhaust: 1"Thread
- 2 To expansion tank
- 3 AC Power 4G4
- 4 AC Sense 4G2.5
- 5 Water in (cold) hose 25 mm
- 6 Fuel out 8mm
- 7 Fuel in 8mm
- 8 Battery + "Red" 25mm<sup>2</sup>
- 9 Battery - "Black" 25mm<sup>2</sup>
- 10 Water out (hot) hose 25 mm

Figures 5 and 6: Connections for genverters using Z482, L2E, D722 and L3E engine blocks)



## 2.7 FUEL SUPPLY

### 2.7.1 Fuel tank

Fuel tanks should be made of appropriate material such as (stainless) steel or plastic. Steel tanks should not be galvanized or painted inside. Condensation can occur in metal tanks when temperature changes. Therefore, water accumulates at the bottom of the tank and provisions should be made for the drainage of this water.

The tank will need a filling connection, a return connection and an air ventilation connection which will require protection against water entry.

Some official regulations do not allow connection points at the base of the fuel tank; connections are to be made at the top of the tank with internal tubing down to a few cm above the bottom of the tank. When using the existing fuel tank of the car engine, fitting should be carried out with extra care. Both a supply line and a return line should be installed and go into the tank from the top. Interference of the two systems (car engine and genverter engine) should be avoided. Driving the tank empty below the level of the suction pipe of the genverter could make it necessary to bleed the fuel system.

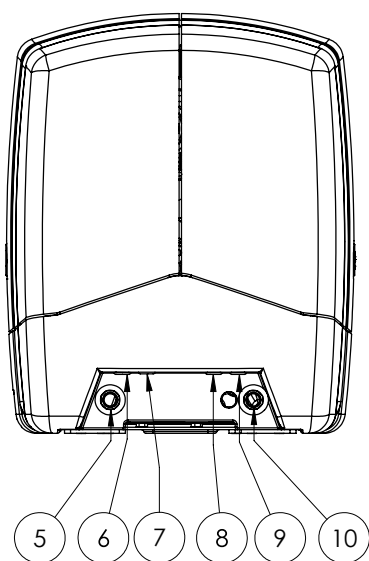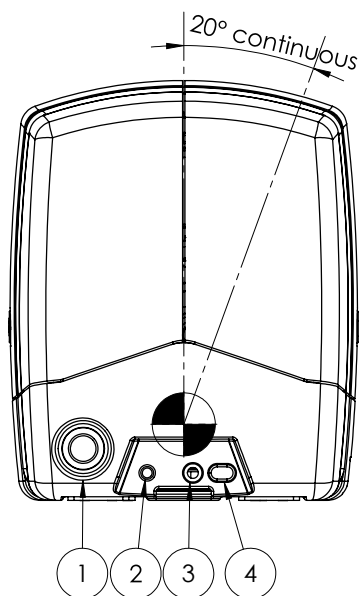

- 1 Exhaust: 1-1/2" Thread
- 2 To expansion tank
- 3 AC Power 5G6
- 4 AC Sense 4G2.5
- 5 Water in (cold) hose 25 mm
- 6 Fuel out 8mm
- 7 Fuel in 8mm
- 8 Battery + "Red" 25mm<sup>2</sup>
- 9 Battery - "Black" 25mm<sup>2</sup>
- 10 Water out (hot) hose 25 mm

Figures 7 and 8:  
Connections for genverters using D1105 engine block

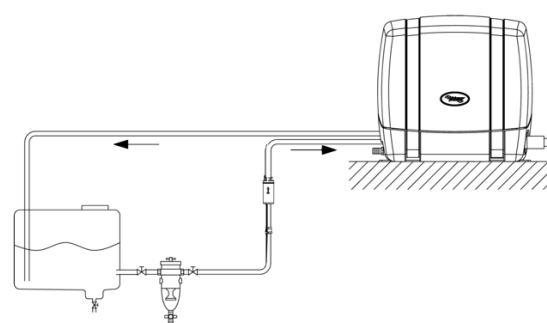


Figure 9: Fuel tank below the genverter

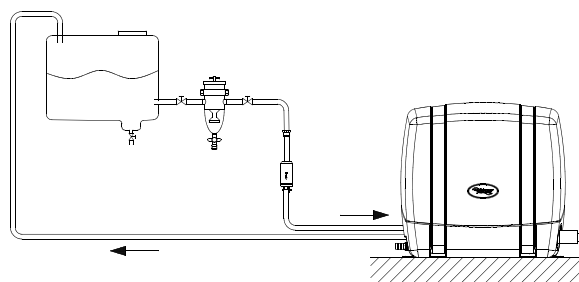


Figure 10: Fuel tank above the genverter

### 2.7.2 Fuel lift pump

All models are fitted with an external fuel lift pump. This should be mounted close to the tank, in an angle or vertically to prevent air bubbles from blocking the system.

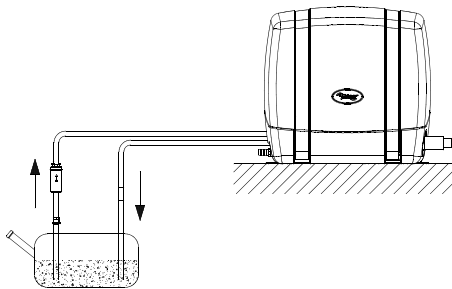


Figure 11: Fuel line assemblies with pump mounted vertically or in an angle

### 2.7.3 Fuel pipes

When the tank is above the genverter (Figure 10) we recommend ending the return line on the top of the tank. When the return is on the top, siphoning of the return line is impossible in case of a leakage. Only the fuel supply line will need to be fitted with a fuel cock. When the tank is below the genverter (Figure 9) we recommend ending the return line on the bottom of the tank below the inlet of the supply line.

Both supply and return fuel pipe lines should be made of appropriate material and have an 8 mm inner diameter. The quality of the tubing of fuel pipes may be subject to local regulations depending on the application of the vehicle.

The fuel pipes can be connected to the flexible hoses which are on the genverter and are prepared to be fitted to 8 mm pipe. The resulting fuel line complies with CE standards as well as ISO 7840 A2.

It is important to avoid bends in the pipes, as they could trap air bubbles. The return pipe should never be connected to the suction pipe. The return line should be of 8 mm diameter and go straight back via the top to the bottom of the tank. When the return is too narrow, has too many bends and goes back to the bottom of the fuel tank (i.e. bypassing the top), the back-pressure may be too high. This results in irregular running of the engine. When the engine runs irregularly, check if back-pressure is the problem by disconnecting the return line just outside the canopy and draining it in a canister. When the engine runs smooth now, the return piping has to be changed. It could also help to install a second (electrical 12V) fuel lift pump in the supply line to increase the pressure.

### 2.7.4 Fuel filters

A fine fuel filter is installed which requires maintenance. WhisperPower recommends installing an extra fuel filter/ water fuel separator near the fuel tank.



Before starting your genverter for the first time follow the fuel system bleeding procedure in the user's manual.

## 2.8 RADIATOR COOLING

### 2.8.1 General instructions

The radiators can be mounted below the floor, in the side or on the roof of the vehicle. It is recommended to install the radiator as close as possible to the unit. The piping should be fitted as direct as possible.



**It is very important to use good quality heat and pressure resistant hose and fittings. Therefore it is strongly recommended to use WhisperPower installation kits.**

### 2.8.2 How and where to mount the radiator

The radiator kit includes rubber mountings to prevent vibrations from being transferred to the body of the vehicle. Due to the differences between vehicles general instructions are hard to give. For OEM customers, WhisperPower can supply a customized installation kit.

When mounting the radiator it is important to take care that the outgoing connection, which is the connection to the engine inlet, is on the top position (Figure 17, detail A) and is connected to the expansion tank. Also when the radiator is mounted flat at the bottom of the vehicle the outgoing connection is connected to the expansion tank. This is the best way to have the system release air and to add liquid when necessary.

### 2.8.3 Bottom-mounted radiator

When bottom-mounted, the radiator should not be the lowest point of the vehicle to avoid damage.

A free flow of air should be ensured. When horizontally mounted, the fan should be on top, causing a flow of air downwards. Often it is possible to find a place where extra space above the fan helps to create a free flow of air. It is recommended to fit a shield below the radiator, catching stones and dirt and operating as a spoiler. The distance between the radiator and the shield should be at least 50 mm. Sometimes it is possible to build the radiators and shield on a sub frame that is mounted below the vehicle as a module.



**MEASURES HAVE TO BE TAKEN TO PREVENT THE HOT AIR FROM CIRCULATING AND REDUCING THE CAPACITY OF THE RADIATORS.**

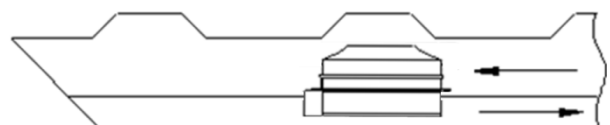


Figure 12: Bottom-mounted radiators with shield



#### 2.8.4 Side-mounted radiators

Both effective and easy is to mount the radiator in the side of the vehicle, if possible below the level of the top of the engine. A louvered grid should protect the radiator from rain and objects, but must not block the airflow. The fan should be inwards, causing the air to blow outwards. A disadvantage of having the radiator in the side is possibly more noise from the electric fan and a flow of air that could be felt by people passing by.

A free flow of air should be ensured.

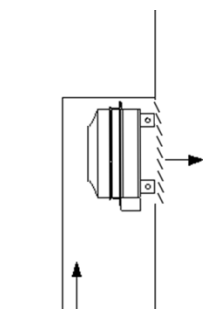


Figure 13: Side-mounted radiator

#### 2.8.5 Roof-mounted radiators

The radiator on the roof is often the best option from the point of view of keeping the noise of the fan away from people and it will give the best result in dissipating the heat. However, this option may conflict with the possible need to keep the vehicle as low as possible.

Another disadvantage is that the piping has to go through the roof which requires connections to be made waterproof. When having the radiators horizontally mounted on the roof (Figure 14) enough space (50 mm) should be between the roof and the radiator fan to have a free flow of air. When the radiator is roof-mounted there should be protection against weather conditions. To avoid damage while the vehicle is driving at high speed, the use of a spoiler may be necessary.

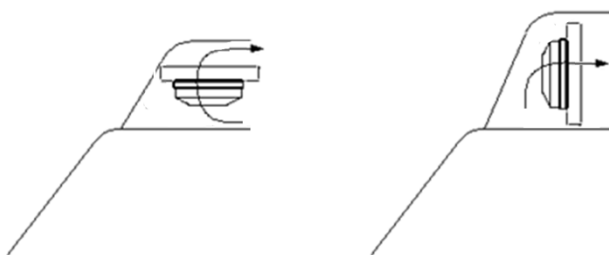


Figure 14: Two examples of top mount radiators

#### 2.8.6 How and where to mount the expansion tank

When the radiators are above the engine, the piping should be fitted below the top of the radiators! (see Figure 15). Bends in the piping that can trap air bubbles, should be avoided or ventilated (see Figure 16). The expansion tank must be fitted in the outgoing circuit of the radiator, i.e. the inlet pipe of the engine

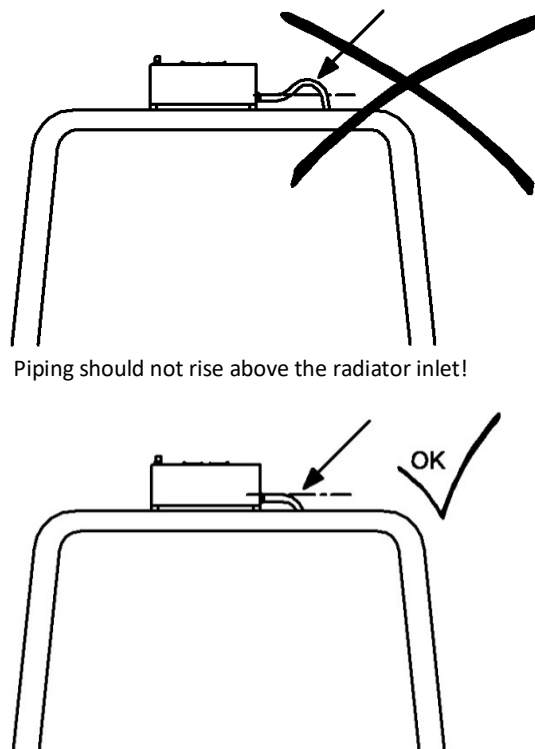


Figure 15: Air traps should be avoided

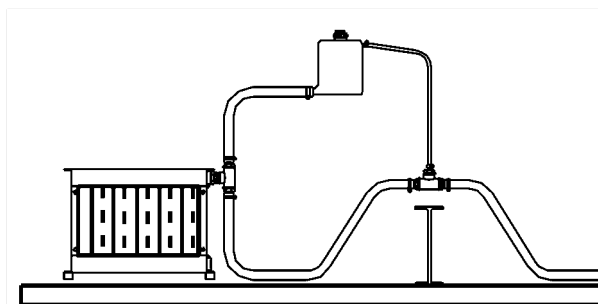


Figure 16: Ventilating an air trap

Special attention should be paid to the ventilation of the system. The expansion tank for the coolant is also used to release air bubbles and makes it possible to add coolant into the system in an easy way. This expansion tank should be at the highest point of the system and mounted as high as possible.



Most cooling problems originate from air traps blocking the circulation of the engine coolant.

We use a pressurised system. Wherever the radiators are mounted, it is necessary to ventilate the exhaust manifold of the engine. The exhaust manifold has an 8 mm connection for ventilation. The delivery includes 8 mm high pressure and high temperature resistant hose in the to connect the hose connection on the side of the manifold to the expansion tank.

The cooling system should be filled with long-life G12+ cooling liquid. Initially the engine cooling system can be filled via the cap on the exhaust manifold of the engine. However, when the radiator is above the engine one can only fill the system to the level of the manifold. Additional filling has to be done via the expansion tank.

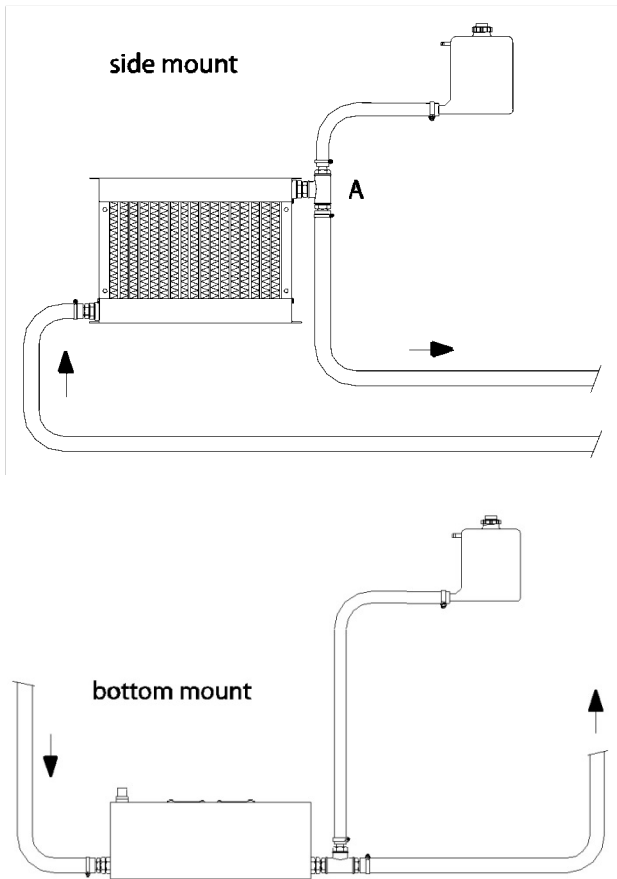


Figure 17: Outgoing circuit connected to the expansion tank

When the radiator is flat mounted on the roof, the expansion tank should be mounted a little higher. (see Figure 18, detail B).

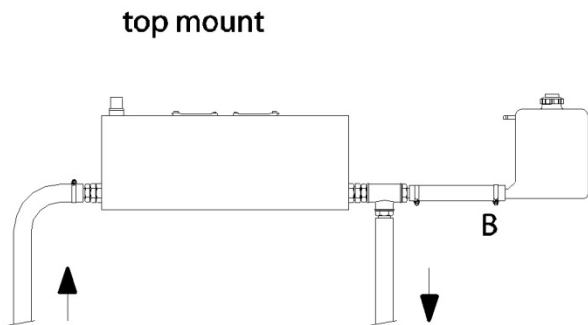


Figure 18: Low profile radiator assembly on the roof

## 2.9 DRY EXHAUST SYSTEM

### 2.9.1 General remarks

A dry exhaust muffler system should be very effective in silencing the exhaust when applying the right mufflers. However, noise could be generated by vibrations in the mufflers and be transferred to the chassis. Tacit factors like the length of specific pipe sections could cause the noise to be amplified. It is very difficult to take these factors into account.

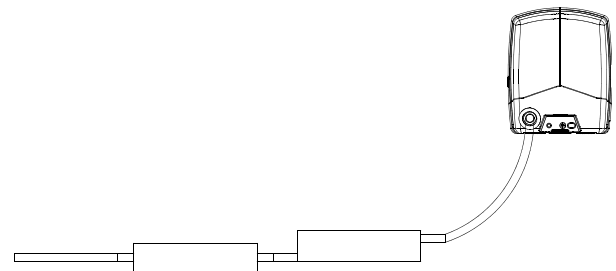


Figure 19: Dry exhaust systems on vehicles

The standard WhisperPower exhaust kit contains the materials to perform a professional installation. It includes a stainless steel flexible bellow (hose) to allow for expansion and to prevent vibrations from being transferred. Rubbers are supplied to mount the mufflers flexible. Insulation jackets for the flexible bellow and the resonance muffler are optionally available, and very effective in dampening vibrations. Still, additional measures may have to be taken like an extra clamp in a vibrating section of pipe, insulation blankets on other parts of the system and possibly even additional mufflers.



**WHEN THE EXHAUST IS LED THROUGH THE ROOF OF A VEHICLE, MEASURES HAVE TO BE TAKEN TO PREVENT RAINWATER FROM ENTERING THE SYSTEM. SPECIAL RAIN CAPS ARE AVAILABLE AS AN OPTION.**

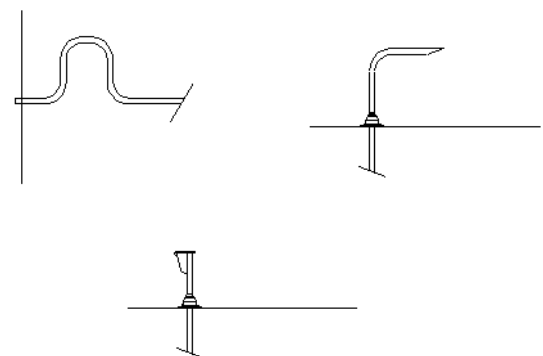


Figure 20: Ways to prevent water from getting in

A negative feature of a dry exhaust system is the heat radiated by its components. When a dry exhaust has its outlet on the roof, all the pipes inside the vehicle have to be insulated.



**The exhaust pipes will be very hot and all accessible pipes and mufflers are dangerous to people when not insulated.**

Some companies specialize in insulating hot pipes, and fancy systems are available to make them look better. Alternatively, you can wind fiberglass or rock wool around the pipes and seal the insulation with aluminum tape.

### 2.9.2 The standard dry exhaust system

The standard exhaust system comprises:

On the genverter set:

- An insulated exhaust bend

In the exhaust installation kit:

- A stainless steel shielded flexible bellow
- A resonance muffler
- An absorption muffler
- Clamps and rubbers
- Fittings, bends and pipes to make the various connections
- Blankets for thermal and acoustic insulation (optionally available).

The mufflers are high quality industrial mufflers much more effective, robust and durable than mufflers made for automotive use.

### 2.9.3 Installation of the exhaust

An essential step in determining the location of the genverter is considering how install the exhaust. Usually, space can be found below the vehicle to mount the mufflers. The outlet should blow the fumes away from the doors. When the gasses are in the flow of air blowing from the radiators this will help to make the fumes less noticeable. Fumes must not be sucked into the flow of air passing through the radiators. In calm conditions, a slight smell of exhaust fumes around the vehicle is hardly avoidable.

Bringing the exhaust to the top of the vehicle gives the best results on noise and smell. However, pipes inside the vehicle should be insulated and there should be a collar around the hole in the roof to prevent the ingress of rainwater.

The mufflers should be wide apart: the resonance muffler close to the genverter and the absorption muffler on the end of the line, with at least 1 m pipe in between. A short pipe (30 cm) should be on the far end after the absorption muffler. The absorption muffler requires no particular flow direction and could be mounted both ways. The resonance muffler, however, should be mounted taking into account the indication shown on the muffler itself.



**The resonance muffler should be fitted taking into account the gas flow direction indicated.**

The exhaust kit contains clamps for mounting the exhaust pipes to stainless steel bars. These bars should be mounted to the vehicle chassis. It is recommended to use rubber mountings whenever possible. However, care should be taken that the heat conducted through the brackets will not affect the rubber. Figure 21 shows how to mount the rubber in a safe way. An extra safeguard in steel wire or chain may be considered.

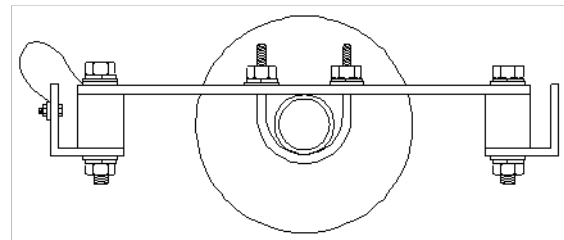


Figure 21: Mounting bracket in rubber with safeguard

## 3 ELECTRICAL INSTALLATION

### 3.1 DIGITAL DIESEL CONTROL SYSTEM

The standard electrical control system is in 12 Volt with negative earth. Non-earth return is available as an option. The engine is controlled by a highly advanced microprocessor based system: Digital Diesel Control, which has both a local control and a remote panel.

### 3.2 REMOTE CONTROL

A remote control panel also containing a microprocessor is included in the delivery, as well as a 10 m 8-pole communication cable (Figure 22). Other lengths are available on request. A longer (up to 30 m) cable can be connected if required. For distances exceeding 30 m, please consult the WhisperPower service department.

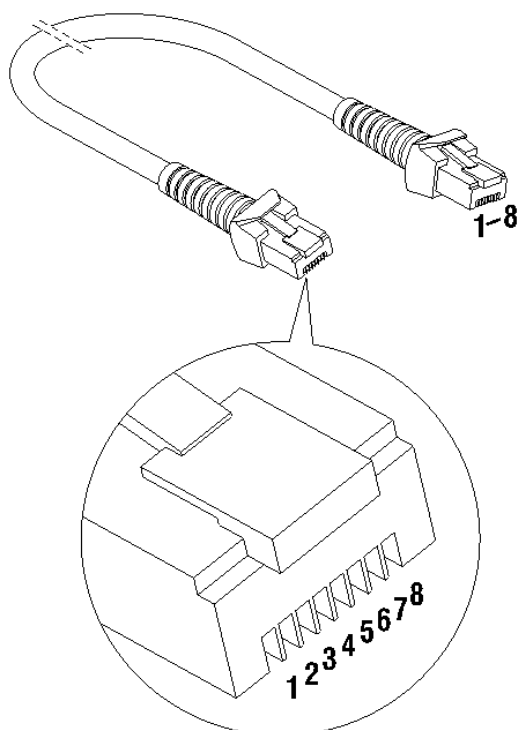


Figure 22: Remote control cable

The control panel can be mounted in the dashboard using the plastic sawing template. For dimensions, refer to the drawings in Chapter 5.

Two more remote control panels (slave panels) can be put in parallel using the modular connectors on the back of the units. Actually, the slaves are regular remote control panels offering all functions again.

When using the factory settings, installation is very simple: just plug in both end of the communication cable and the generator is ready to use (Figure 22).

### 3.3 ACOUSTIC ALARM OR WARNING LAMP

An external max. 150 mA relay can be connected in order to generate an acoustic warning, light a warning lamp, etc. Be

aware of polarity as some relays have a diode inside and must be connected plus to plus and minus to minus as indicated (Figure 23).

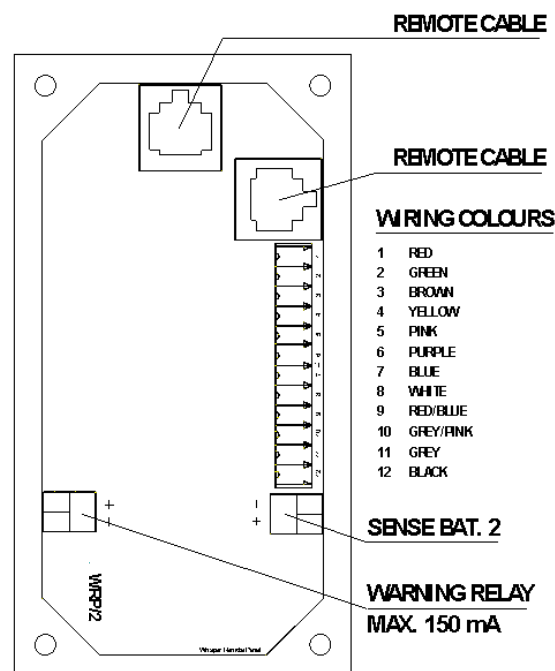


Figure 23: Remote box terminals

### 3.4 CONNECTION FOR EMERGENCY STOP / FIRE ALARM SWITCH

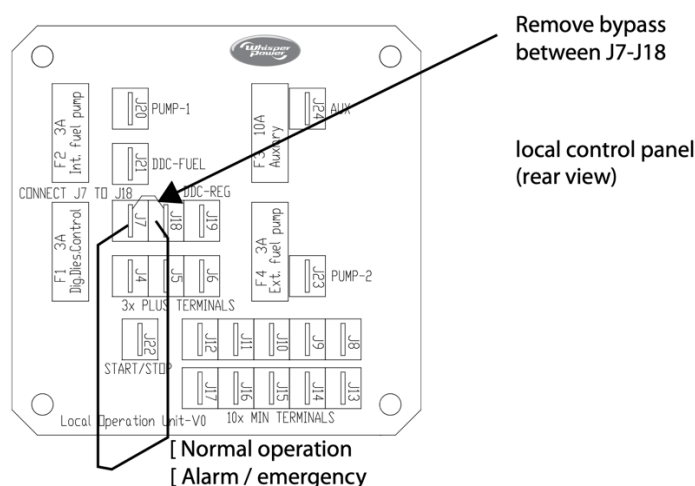


Figure 24: Connection for emergency stop / fire alarm switch

To connect an emergency stop button or to stop the generator automatically in case of a fire alarm, you can use the bypass connection between fastons J7 and J18 on the backside of the local control panel (Figure 24). To do so, remove this bypass connection and then replace it by an emergency switch or a potential free fire alarm switch with normally closed contacts.

### 3.5 AUTOMATIC STARTING AND STOPPING

#### 3.5.1 General



WhisperPower cannot be held responsible for damage caused by the genverter running unattended using the auto-start/stop mode or interval mode.



Using the auto-start/stop or interval mode, the genverter may start unexpectedly. When working on the electrical system, the 3 Amp fuse must be removed from the control panel and the battery plus cable must be removed from the battery.



Included in the delivery are warning stickers to be applied on several parts of the electric installation (transfer switch, distribution box, etc.) to warn against possible automatic starting of the genverter.

The WhisperPower Digital Diesel Control system offers several options for automatic starting and stopping. This menu as well as other DDC menus may be locked. For unlocking and setting these options, refer to the APPENDIX of the DDC user's manual.

#### 3.5.2 Start/stop by external switch

At the back of the DDC remote control panel (40209102), you will have the possibility to connect two wires in order to allow the genverter being started by an external signal. This requires the optional 12-pole green connector (part no. 50209119).

Two common options are shown in Figure 25, where the signal can be provided by an external relay or by the Whisper Battery Monitor (WBM).

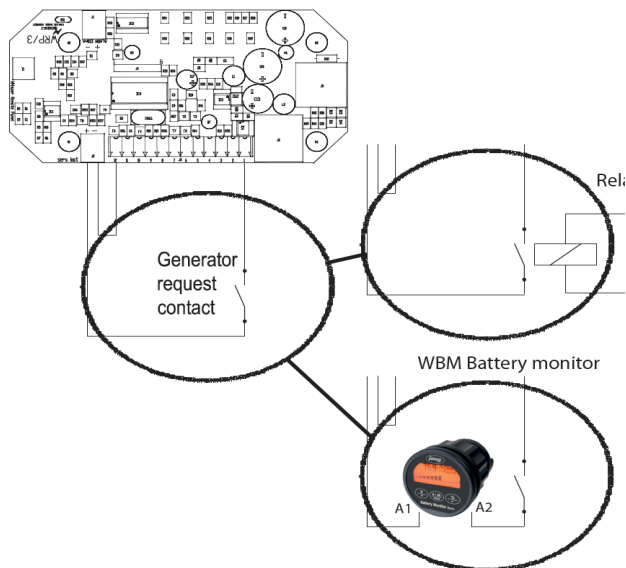


Figure 25: Connection for start/stop by external signal

Another possibility is to monitor the voltage of a second battery (not being the starter battery) and to start the genverter automatically when this voltage drops below a set value.

This second battery is often called “auxiliary battery” or “service battery”. It is referred to as BAT2 in the DDC menus. A sense wire to monitor the second battery should be connected (check polarity!) to the connector on the back of the remote panel (Figure 23). The sense wires must be connected directly to the second battery and be protected by a 3A fuse.

**Settings:** For settings other than the factory settings, refer to the DDC user's manual, especially to the APPENDIX.

### 3.6 STARTER BATTERY

For starting, the genverter requires a 12V starter battery of 80 Ah (smaller models) or 100 Ah (ELITE GV/3+ and ELITE GV 15).

The genverter can be connected to the main engine battery or have its own battery. We strongly recommend the use of a separate battery for the genverter and keeping the wiring system for the car engine and the domestic DC supply system completely separate and individually connected to separate batteries.

However, the negatives of all the batteries on the vehicle should be interconnected to avoid difference in the voltage level of the earth on different places causing trouble to electronic devices which might be in the system.

The above recommendation is not valid for vehicles having the starter battery of the vehicle engine or other auxiliary equipment positive grounded. When this is the case an expert should be consulted.

The starter battery is charged by the alternator on the engine. However, when the genverter is not used for an extended period of time, its control system may eventually drain the starter battery. The WhisperPower catalogue (check [www.whisperpower.com](http://www.whisperpower.com)) offers several solutions to prevent this from happening:

- A battery switch may be installed to interrupt the positive connection.
- An AC-supplied battery charger may also help to keep the battery in good condition when the genverter is not used (see also battery installation kit).
- WhisperPower also offers high efficiency battery charging units which are able to charge both the vehicles's main battery and the starter battery.

### 3.7 OTHER RECOMMENDATIONS AND WARNINGS

The battery should be secured for poor road conditions and the terminals should be insulated. For extra safety the battery can be enclosed in a wooden, plastic, fiberglass etc. (non metal) box. Even when the earth return system is applied a negative battery cable should be used and the vehicle should not to be used as a conductor.

The battery cables are supplied in a standard length of 2.5 m. If longer cables are required a larger cross sectional area should be considered to compensate for voltage reduction.



**When two batteries are used in series to provide a 24 Volt supply system, never take off 12 Volt (starting) power from one of these batteries. This will result in severe damage to both batteries within a short time.**

Disconnect the battery leads if electrical welding is to be carried out, otherwise damage will be caused to the diodes of the alternator.



**As explosive hydrogen gases may be discharged during charging, the battery should be located in a well-ventilated space. Ensure that the supplied battery cable connectors are properly fitted. Never remove these during or shortly after charging, as sparking may occur, igniting the hydrogen gases.**

### 3.8 ALTERNATING CURRENT



**The electric power supplied by the genverter is of a high voltage and dangerous to people. Before working on the system read the sections on safety in the users manual.**



**Be aware that people are not used to have AC available on a vehicle. Put warning signs on wall sockets and on junction boxes. Instruct non-regular users of the vehicle. Warn maintenance personnel of garages that do service on the vehicle.**



**Generators used on vehicles that are operated in a hazardous environment often have to fulfil special regulations and additional measures have to be taken accordingly.**

These genverters are designed to generate power for both AC and DC installations, depending on the type of WhisperPower PowerCube or Power Module installed with the genverter. Be sure that all electrical installations (including all safety systems) comply with all regulations required by the local authorities. All

electrical safety/shutdown and circuit breaking systems have to be installed onboard as the genverter itself cannot be equipped with such equipment for every possible variation.

The vehicle's power supply system should be suitable and safe for the voltages applied and the power that will be generated. Special attention has to be paid on dividing the system in branches which are fused individually.

It is absolutely essential that each and every circuit in the electrical system be properly installed by a qualified electrician.

### 3.9 FUSE

It is the installer's responsibility to protect the live wires between the genverter and the PMG/DC PowerCube. Check the electrical information on the identification plate in order to calculate the right fuse size.

### 3.10 GROUNDING

The AC alternator windings are not grounded.

The housing of the alternator and all other metal parts are grounded. The position of the earth lug is shown in Figures 5 and 7.

The electric installation in the vehicle possibly needs to be protected against insulation failures. Methods of protection are subject to rules that may differ depending on the use of the vehicle and local standards. Experts in this field should be consulted.

### 3.11 CABLE

For the power cable between the generator and PMG/DC Powercube we recommend the use of 4 wire three phase or 5 wire three phase oil resistant cable. This cable should have a sufficient cross sectional area. The generator comes with a power cable pre-installed with a length of 2 meters. For long cables it is recommended to apply cables with a larger cross section (refer to ISO 13297 annex A). See the manuals of the PMG or DC Powercube for specifications on the output power cables of these devices.

## 4 INSTALLATION SUMMARY

### 4.1 GENERAL

- 1 Mount the genverter directly, without additional vibration dampers, on a solid surface.
- 2 If applicable, mount the separate cooling system.
- 3 Connect exhaust system.
- 4 Connect 'fuel supply line' to the water separator/ fuel filter.
- 5 Connect 'fuel return line' to the fuel tank.
- 6 Connect remote panel (just plug in).
- 7 Connect the AC cables to the PMG/DC PowerCube.
- 8 Connect the battery cables to the 12V starter battery's positive and negative terminals.
- 9 If applicable, connect the power supply of the external radiator.
- 10 Install a WhisperPower battery charger (optional).

### 4.2 COMMISSIONING TABLE

- 1 Check if the air inlet is sufficient.
- 2 Check if the cooling system for the engine is properly installed and properly filled with G12+ cooling liquid.
- 3 Check if the exhaust system is properly installed. Check maximum length of exhaust hose, diameter of exhaust piping.
- 4 Check all coolant connections.
- 5 Check the AC cables and the grounding.
- 6 If the genverter is installed with a WP-PMG, check if an AC breaker is installed before or after the power source

selector. When there is only a circuit breaker, use it to disconnect the generating set from the grid.

- 7 Check all DC connections, check if the battery switch/ circuit breaker is closed.
- 8 Open the fuel valve. Check if there are no air leaks in the fuel supply line, and check if the lift of the fuel is less than 1 m. Check if there is no air in the water fuel separator.
- 9 Check the oil level and color of the oil.
- 10 To bleed the fuel system, push the "Start" button on the local control (not on the remote panel) and hold at least 5 s and as long as necessary to bleed the system.
- 11 Start the engine by pushing the start button.
- 12 If the genverter is installed with a WP-PMG, check the delay of 5 to 10 seconds in the power source selector transfer.
- 13 Check voltage under 'no load' conditions.
- 14 Check if the genverter can bring the full load.
- 15 Check if the battery charger of the genverter is working (max. 14.5 V).
- 16 Close the sound shield and check the noise level.
- 17 Stop the genverter and check the engine again for leakages of oil, fuel or coolant and check the oil level again.

Installation checklist available on our website:  
[www.whisperpower.com](http://www.whisperpower.com).

Commissioning form available on our website:  
[www.whisperpower.com](http://www.whisperpower.com).

### 4.3 TECHNICAL DATA

Refer to the User's Manual for an overview of general technical specifications.

### 4.4 SPECIFICATION OF THE ACCESSOIRES

Item	Size on Elite GV2, GV/3, GV 8, GV 10 and GV 12	Size on Elite GV/3+ and Elite GV 15
Fuel filter/water separator		30 micron
Fuel inlet and return		8 mm
Cooling system connections	25 mm	25 mm
Flexible exhaust bellow/hose	1" BSP	1½" BSP
Exhaust piping	1"	1½"
Exhaust mufflers	1" BSP	1½" BSP
Starter battery	80 Ah	100 Ah



## 4.5 EXHAUST KITS

### 4.5.1 1" Dry exhaust


REV.	DESCRIPTION	DATE	REV. BY
A	Item 7 and 14 added	16-12-2016	JK

Dimensions: sheet 2

ITEM NO.	QTY.	DESCRIPTION	DRAWING	ARTICLE NO.
14	1	Elbow 90deg 1/1" galv.	50221475	50221475
13	1	Elbow 90deg m/f 1" galv.	50221471	50221471
12	6	Nut hexagonal M10	50211466	50211466
11	6	Washer spring M10	50211447	50211447
10	6	Underlagging VZ M10	50211406	50211406
9	1	Exhaust hose 1" 500mm SS m/f	50220041	50220041
8	1	Resonant-absorbent geluidsdemper SN116	50230610	50230610
7	2	Pipe nipple 1inch L500mm	50221400	50221400
6	1	Parallel male coupling 1" galv.	50221421	50221421
5	1	Absorption muffler steel 1" SN112	50230609	50230609
4	4	Straight coupling 1/1" galvanized	50221411	50221411
3	1	Pipe nipple 1inch L300mm	50221401	50221401
2	3	Bracket U-clamp 250mm 48-60mm	50221664	50221664
1	3	U-clamp 42mm M10	50221661	50221661
ITEM NO.		QTY.	DESCRIPTION	ARTICLE NO.

UNLESS OTHERWISE SPECIFIED:		FINISH:		TOLERANCE PRINCIPLE:		DO NOT SCALE DRAWING	
GENERAL TOLERANCES		ISO 1015		ISO 1015		SHEET FORMAT:	
FORM AND PLACE TOLERANCES		ISO 1015		ISO 1015		A3	
ISO 2788-C		Material:		Third ANGLE		TITLE:	
WELDING SYMBOLS: ISO 2553		NAME:		DATE:		DRY EXHAUST KIT 1" GENVERTER	
ROUGHNESS ACC. TO ISO 4304		SIGNATURE:		DATE:		ARTICLE NO. 40201325	
		J.C.		13-10-2011		REVISION A	
				3-4-2020		SCALE: 1:7	
						SHEET 1 OF 2	



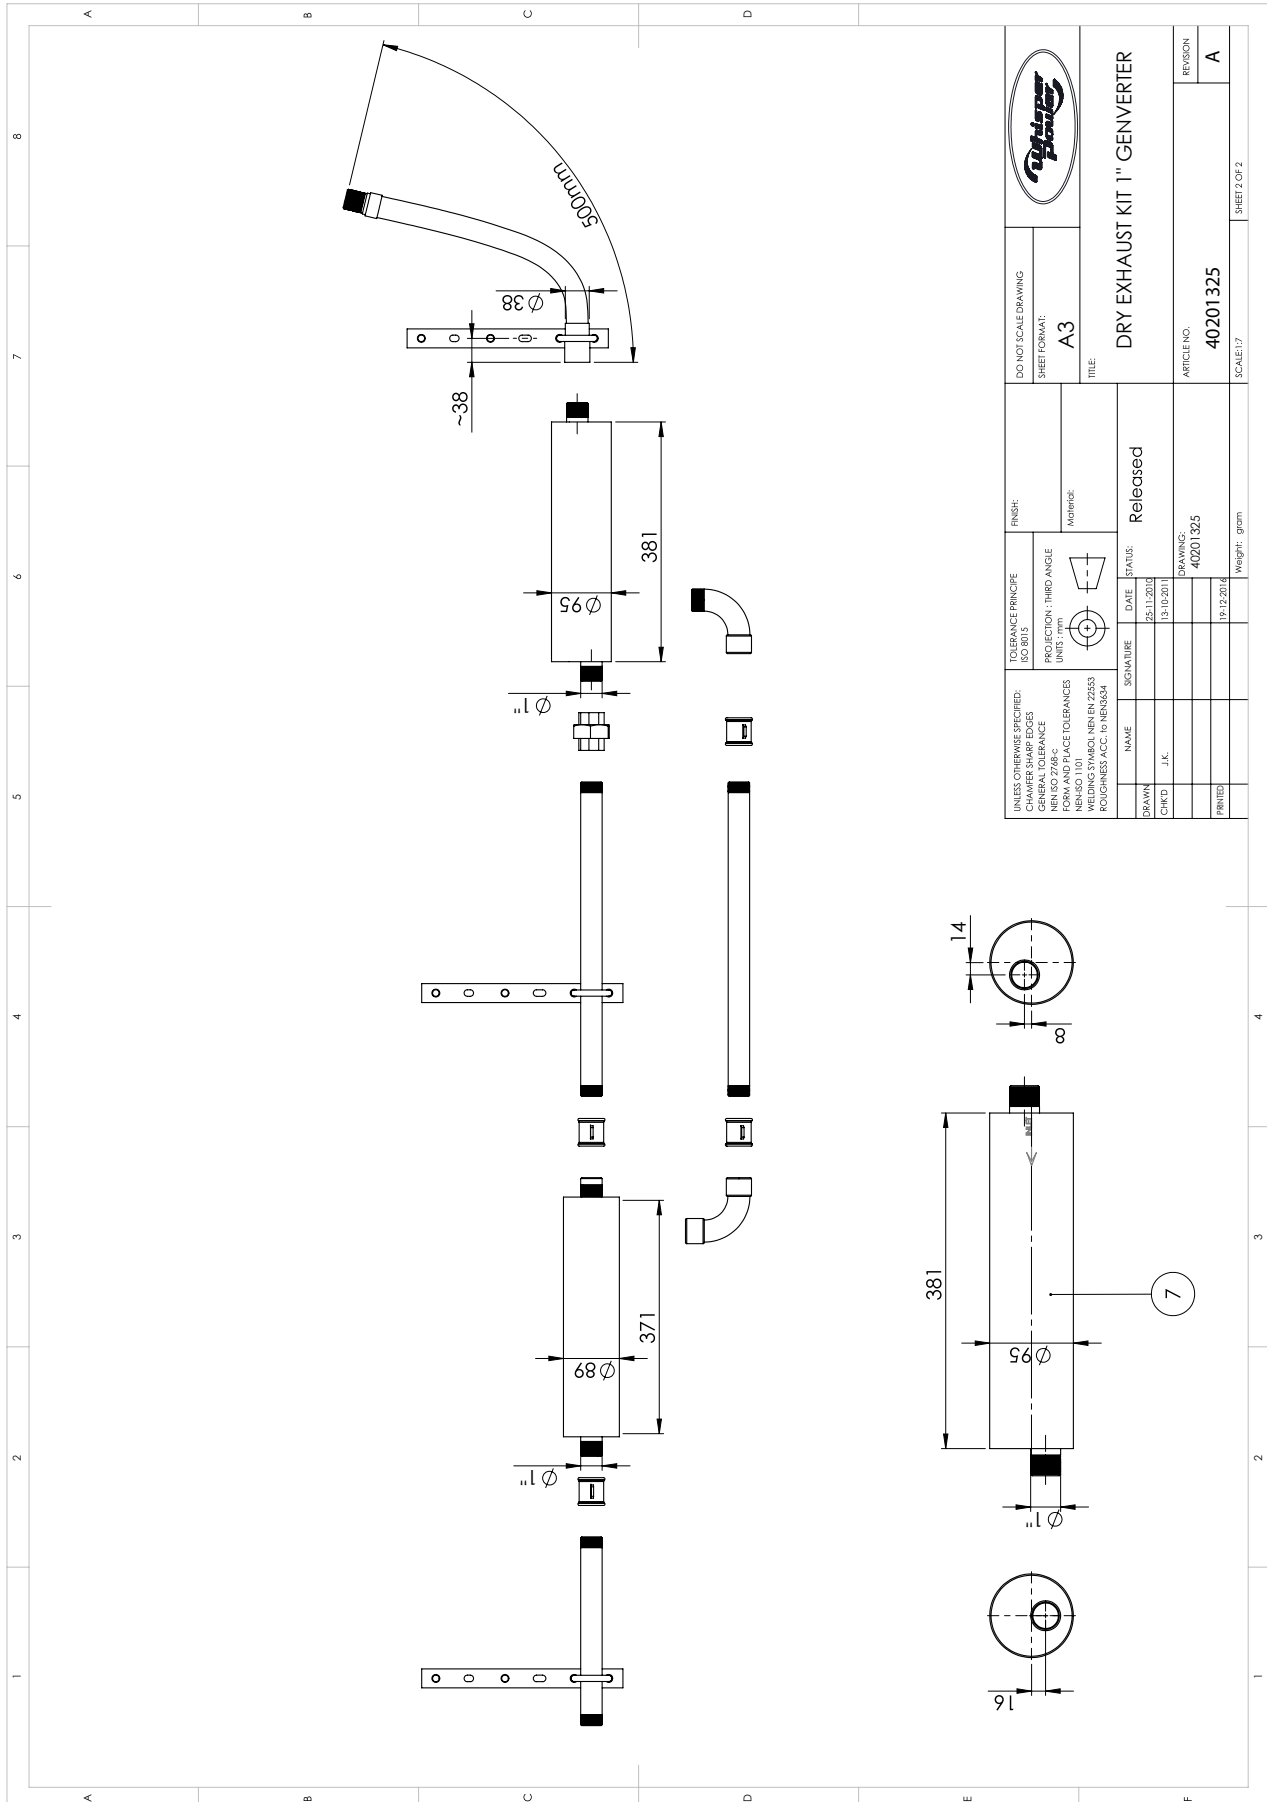

#### 4.5.1 1½" Dry exhaust

**REV. A**

REV.	DESCRIPTION	DATE	REV. BY
A	Item 15 - 50230526 model changed	4-4-2019	J.K.

**Installation instructions:**

Muffler item 1: Place as close as possible to the end of the pipeline

Muffler item 2: Place as close as possible to the engine


Recommended gas velocity of 35 - 50 m/sec. (at the end pipe)

Recommended distance between both mufflers : min. 1 meter - max. 6 meters

ITEM NO.	QTY.	DESCRIPTION	DRAWING	ARTICLE NO.
19	1	Dry exhaust install instructions		40301875
18	1	Resealable plastic bag 230x320		50231201
17	1	Carton WP 900*400*400 - Accessoires		1001P173521
16	2	Insulation end cap for 50230525		40231105
15	1	Insulation blanket exhaust 76 - 45 Absorption Demper		50230518
14	1	Insulation blanket exhaust 70 - 55 Demper SDHC		50230526
13	1	Insulation blanket exhaust 52-26 G1-5 inch		50230525
12	6	Moer M10 DIN934		50220042
11	6	Veering M10		50211466
10	6	Onderlegging VZ M10		50211447
9	3	U-clamp 50mm M10		50211406
8	3	Bracket U-clamp 250mm 48-60mm		50221663
7	1	Elbow 90deg m/f 1 1/2" galv.		50221664
6	2	Straight coupling f/f 1 1/2" galvanized		50221473
5	2	Parallel male coupling 1 1/2" galv.		50221413
4	2	Pipe nipple 1-5 inch 1300mm		50221423
3	1	Exhaust Flex hose 1-5 500mm SS m/f		50221403
2	1	Resonator muffler 1-1.5 G model		50220043
1	1	Absorption muffler 1-1.5 G model		50230524
				50230523

UNLESS OTHERWISE SPECIFIED:		TOLERANCE PRINCIPLE		FINISH:		DO NOT SCALE DRAWING	
CHAMFER SHARP EDGES		ISO 8015		-		SHEET FORMAT:	
FORM AND PLACE TOLERANCES		PROJECTION: THIRD ANGLE		Material:		A3	
WELDING SYMBOLS EN 2553		UNITS: mm				TITLE	
ROUGHNESS ACC. TO RENISHAW						Dry Exhaust Kit 1½ inch	
DRAWN	J.K.	SIGNATURE	DATE	STATUS	Released		
CHECKED	J.K.		04-01-2017				
PRINTED							
ARTICLE NO. 40201875				DRAWING: 1001A173507			
SCALE: 1:1				Weight: 39307.16 gram			
SHEET 1 OF 2				REVISION A			

## 4.6 FUEL KIT

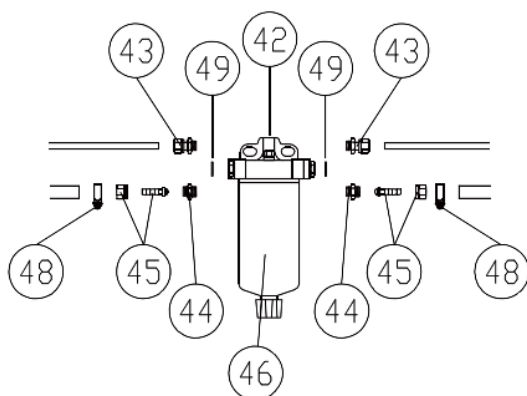

no	qty	article no	description	dimensions
42	1	50230091	Filter head for fuel strainer/water separator	M14x1.5 mm
43	2	50221618	Parallel male coupling	M14 - 8 mm
44	2	50221619	Parallel male coupling	M14 - 10 mm
45	2	50221620	Hose connection, outer cone	M16x1.5 mm, 8 mm
46		50230092	Filter for fuel strainer/water separator	
48	4	50221522	Hose clamp, stainless	10-16 mm
49	2	50221632	Gasket ring	18x14x1.5 mm
not shown	2	50221203	Straight coupling	8 mm
not shown	2	50221252	Barbed-smooth hose nipple	8 mm
<b>TOTAL</b>		<b>40230205</b>	<b>FUEL KIT</b>	

### OPTIONAL MATERIALS AVAILABLE

no	qty	article no	description	dimensions
48		50221522	Hose clamp, stainless	10-16 mm
not shown	per m	50222020	copper fuel pipe	6x8 mm
not shown	per m	50220063	fuel hose	8x16 mm


## 4.7 BATTERY INSTALLATION KIT

### BATTERY INSTALLATION KIT


article no	description	dimensions
61112002	WBC-Handy 20 charger 12V / 2A	157 x 33 x 34 mm
40290093	battery terminal (NEG-)	
40290094	battery terminal (POS+)	
40290099	M8 battery pole adapter set	
40290098	isolation caps (red & black)	
50214701	WP-Compact Manual Battery Switch, 300A	72 x 72 x 78 mm
<b>40290106</b>	<b>INSTALLATION KIT FOR BATTERIES UP TO 100 Ah</b>	

### RECOMMENDED BATTERIES

article no	description	dimensions
40290061	AGM-Power 12V 80Ah Absorbed Glass Matt	350 x 167 x 180 mm
40290031	AGM-Power 12V 100Ah Absorbed Glass Matt	328 x 172 x 222 mm

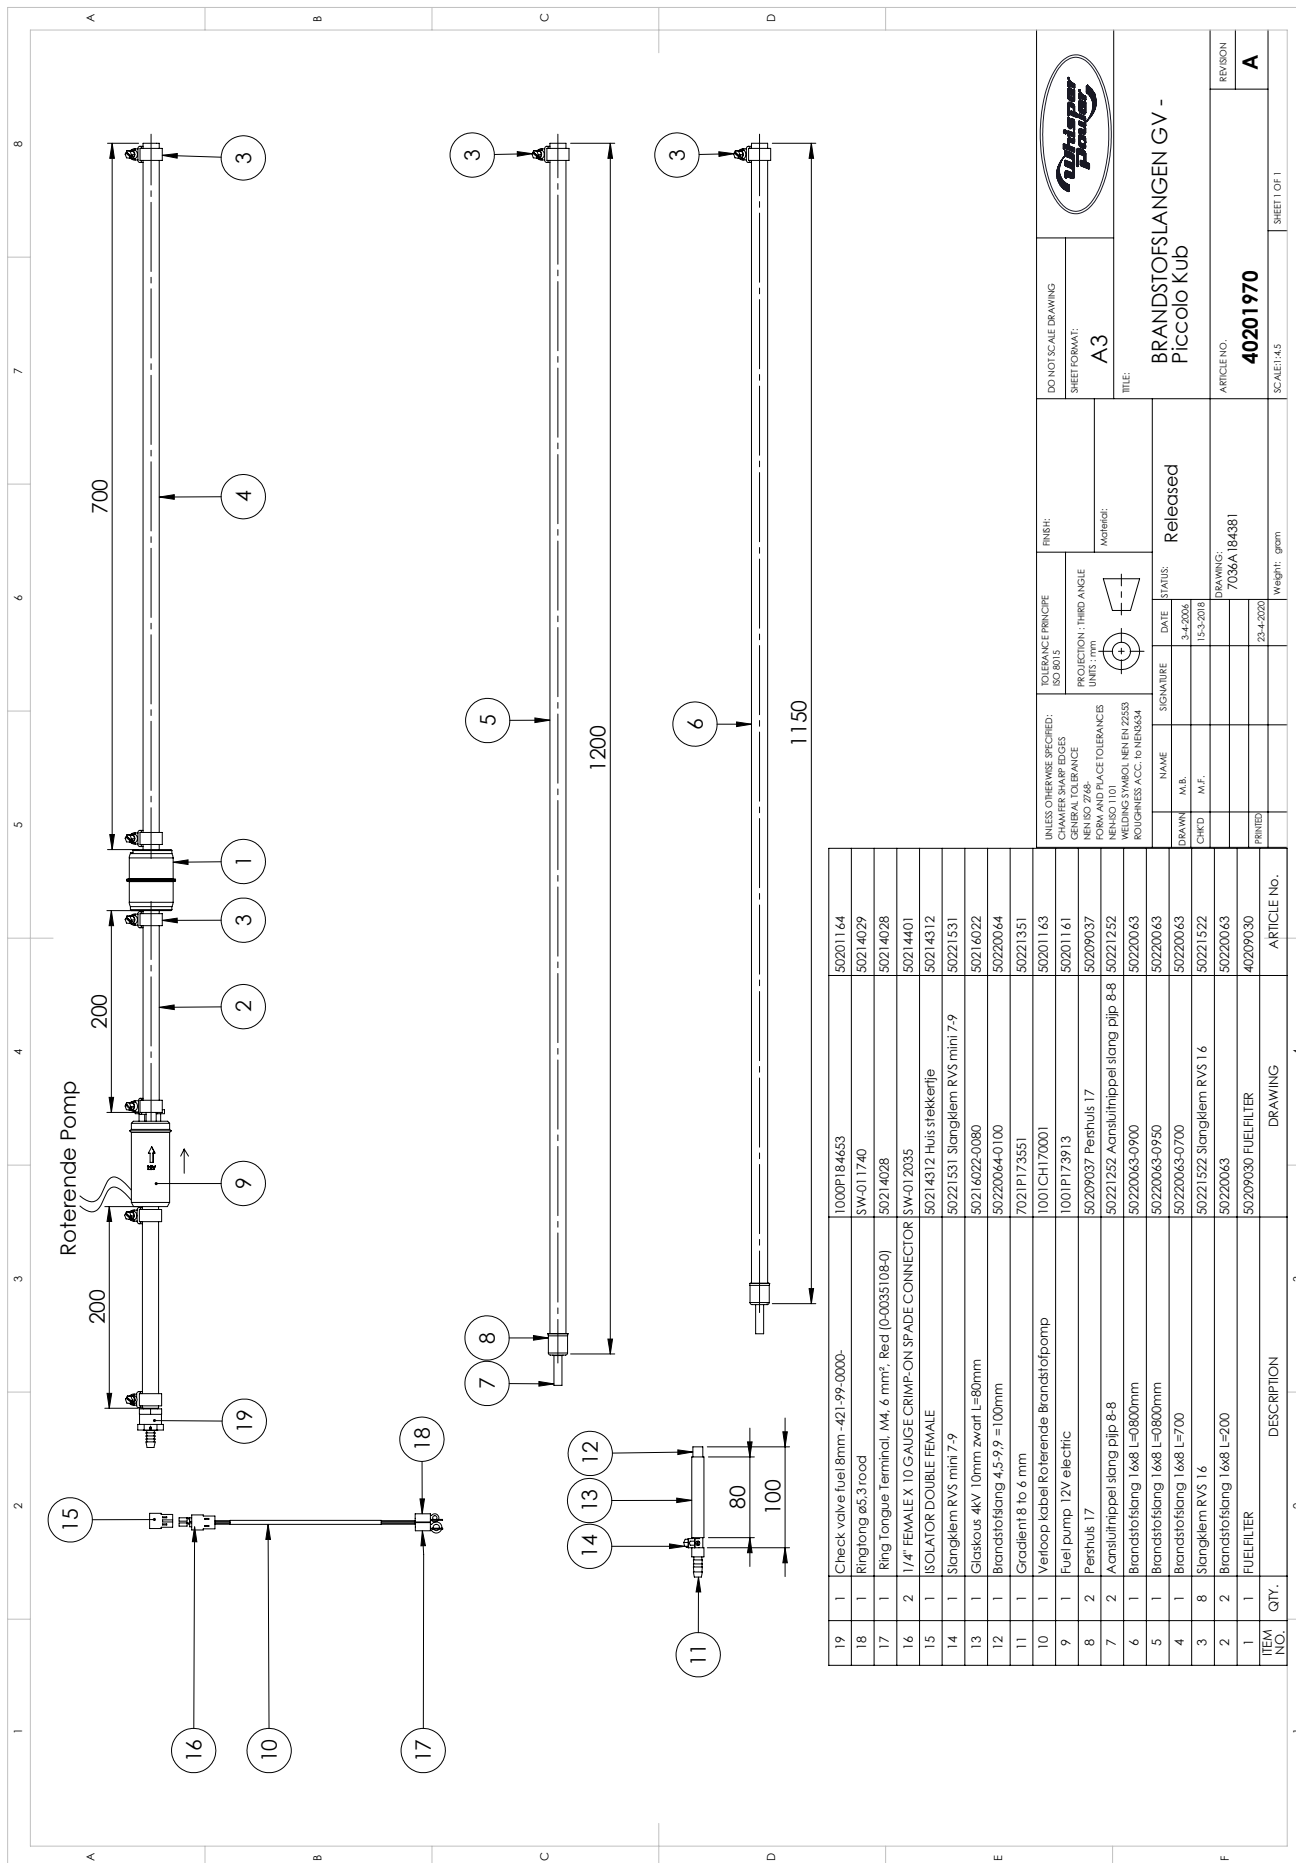


#### 4.8.1 Radiator kit for Elite GV/2, Elite GV 8, Elite GV/3, Elite GV 10 and Elite GV12



ITEM NO.	QTY.	DESCRIPTION	DRAWING	ARTICLE NO.
28	4	Hexagon nut DIN 934 Steel zinc plated M10	01300.100.001	5021.1466
27	4	Spring lock washer with square ends DIN 127 B Spring	01200.100.001	5021.1447
26	4	Hexagon bolt DIN 934 Steel zinc plated 8.8	01200.100.050	5021.1173
25	4	ML035035-17	7050P239004	Included
24	4	Burning Foundation Rod	7050P239003	Included
23	8	Ring 10-40-2.5 Foundation Rod	7050P239002	Included
22	1	Carlton WP 50K550X330 - Accessories	1001P173667	4023.1103
21	1	Carlton WP 310X220X200mm Whisperpower	1001P173666	4023.1101
20	1	Instructions Cooling Kit Engine 11/4 inch AP 430-2.230V	1001P173580	4030.1877
19	1	Reusable plastic bag 16-230	6026P142305	5023.1202
18	1	Reusable plastic bag 230x320	1001P173522	5023.1201
17	8	HOSE SUPPORT STAINLESS 35X12 MM	5022.1599	5022.1599
16	2	Hose Clamp RVS 16	5022.1522 Stanglem RVS 16	5022.1522
15	4	Hose Clamp Stainless Steel 35mm	5022.1503	5022.1503
14	1	Hose coiling 11/4 35x45 L 600mm	1001P173645	50220013
13	2	Hose Clamp Stainless Steel 30mm	5022.1502	5022.1503
12	1	Hose coiling 3/4inch 18-26 L=1500	1001P173643	50220011
11	1	Hose hydraulic 7/9x15mm L=4000	1014P142275	50220005
10	1	Cap for Expansion Tank	50230561	50230561
9	1	Expansion Tank Excluding Cap CN	50230564	50230564
8	1	Mounting Bracket Expansion Tank CN	SW-010960	50230565
7	2	Stangline Buttedrod 1x25	50221010 Stanglicor	50221010
6	1	Hose Connector M 1" x 20mm	50221027	50221027
5	1	VERLOOPRING 1-1/2	50221106	50221106
4	1	Air bleeder 1-2 BSP	7510P141951	50230321
3	2	T-stuk 1 inch BIBBI	50221043 T-stuk 1 inch BIBBI	50221044
2	2	MALE NIPPLE 1	50221064	50221064
1	1	Rod AP430-2.230V sub Assy Kit 40201877	1001A173643	40201983

## 5.1 SYSTEM DIAGRAMS

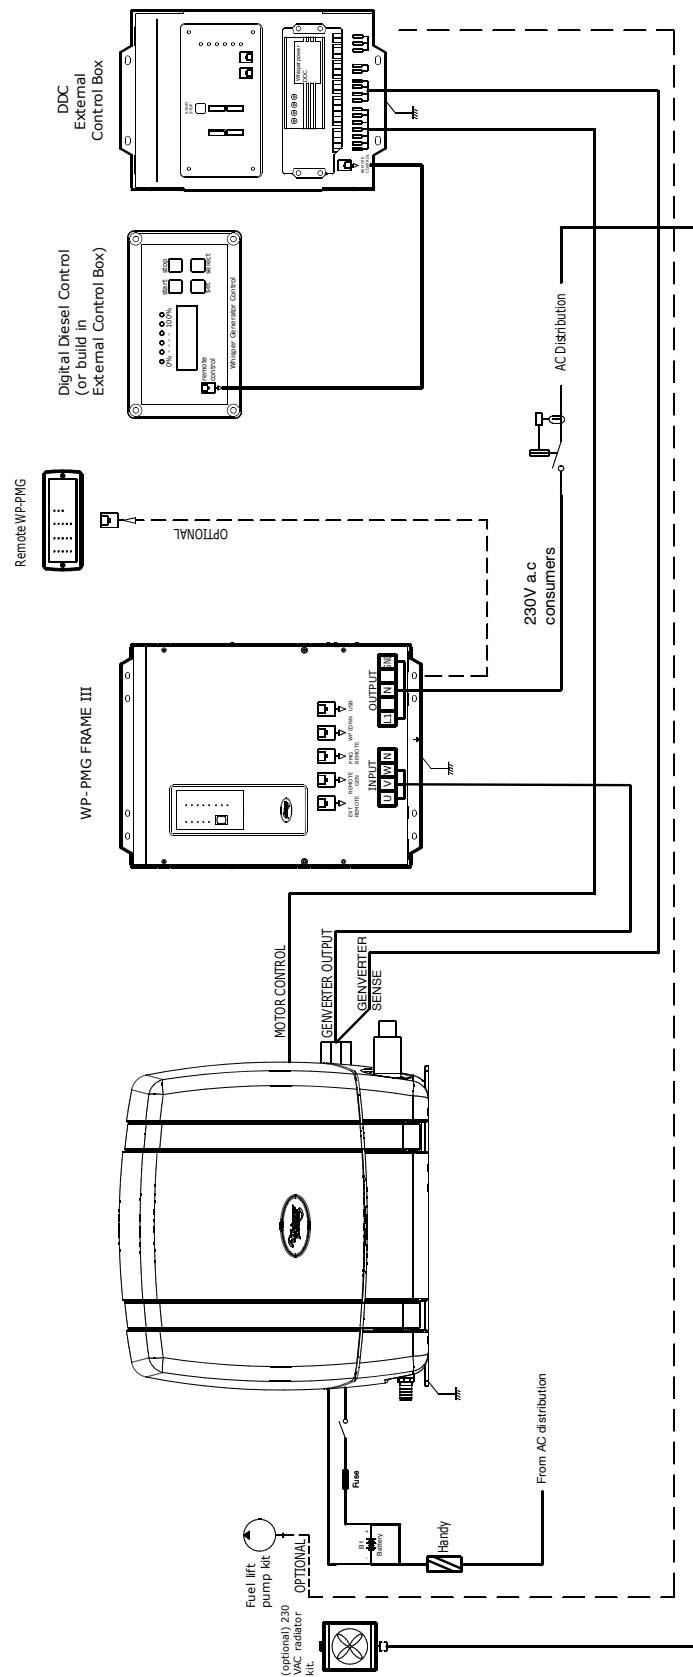

Symbol	Configuration
Earth	
Fuse	
Earth frame	
Normal open isolating switch	
Cross over without connection	
Connected branch circuit	

TABLE	Elite 15 vmp-pmg Genverter/AC Radiator	950SL0309003
Design Review	Mobile Frame 3 Single Line Diagram	
Author	MS	
Check	MS	
Drawn	MS	
Scale	A2	
Sheet	1 of 1	

Figure 27: Layout of genverter system with PMG and 230VAC radiator




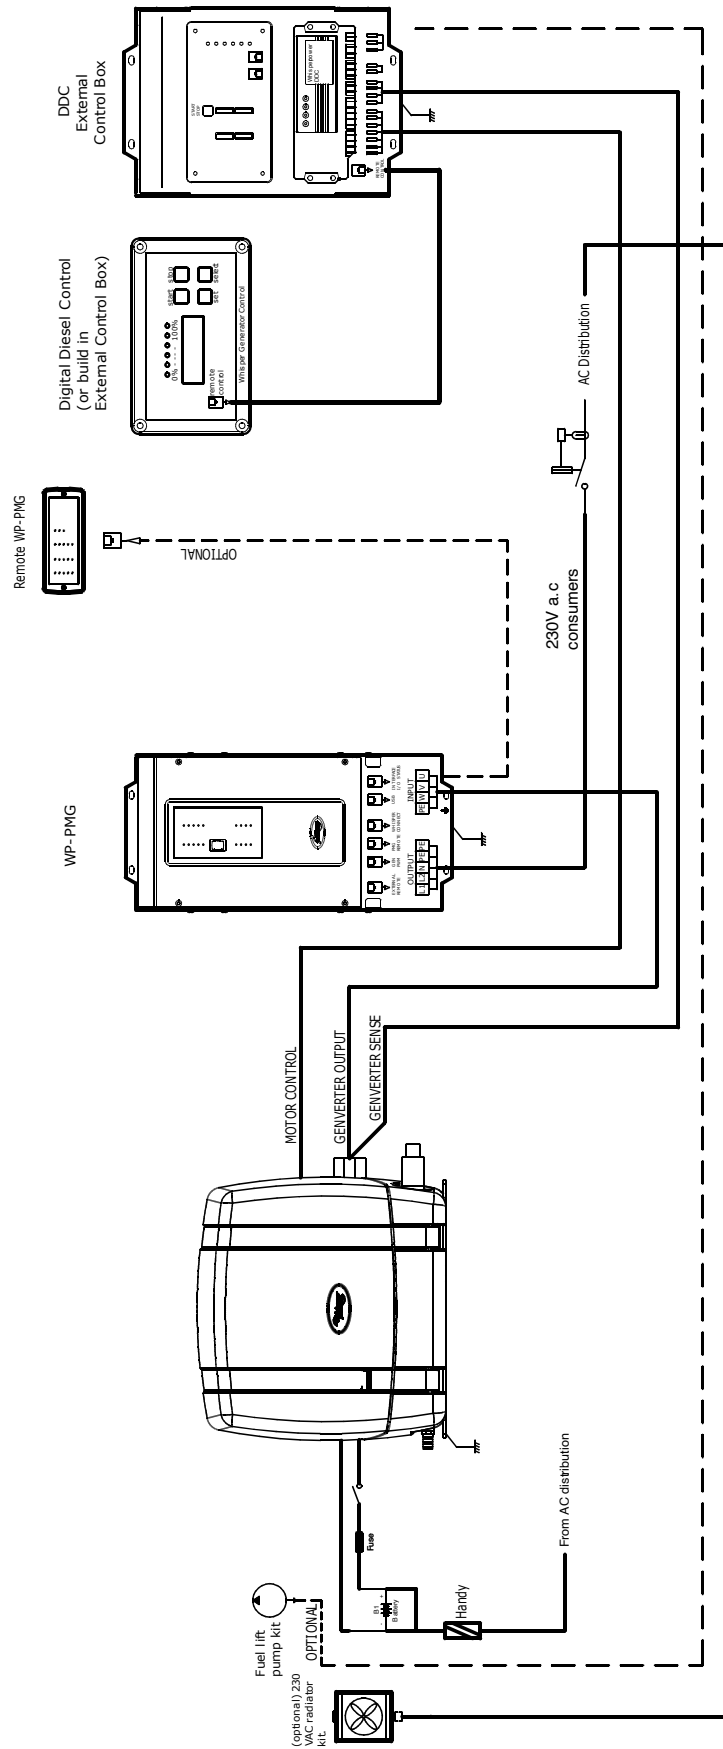


Figure 28: Layout of ELITE GV 15 genverter systems

Symbol	Configuration
	Earth
	Earth frame
	Normal open isolating switch
	Fuse
	Cross over without connection
	Connected branch circuit


<b>Design Review</b> Date: 01/01/2024 By: A2 Rev: 1.0	<b>Module Frame 2 Single Line Diagram</b> Project: 9500SL03090002 Rev: 1.0



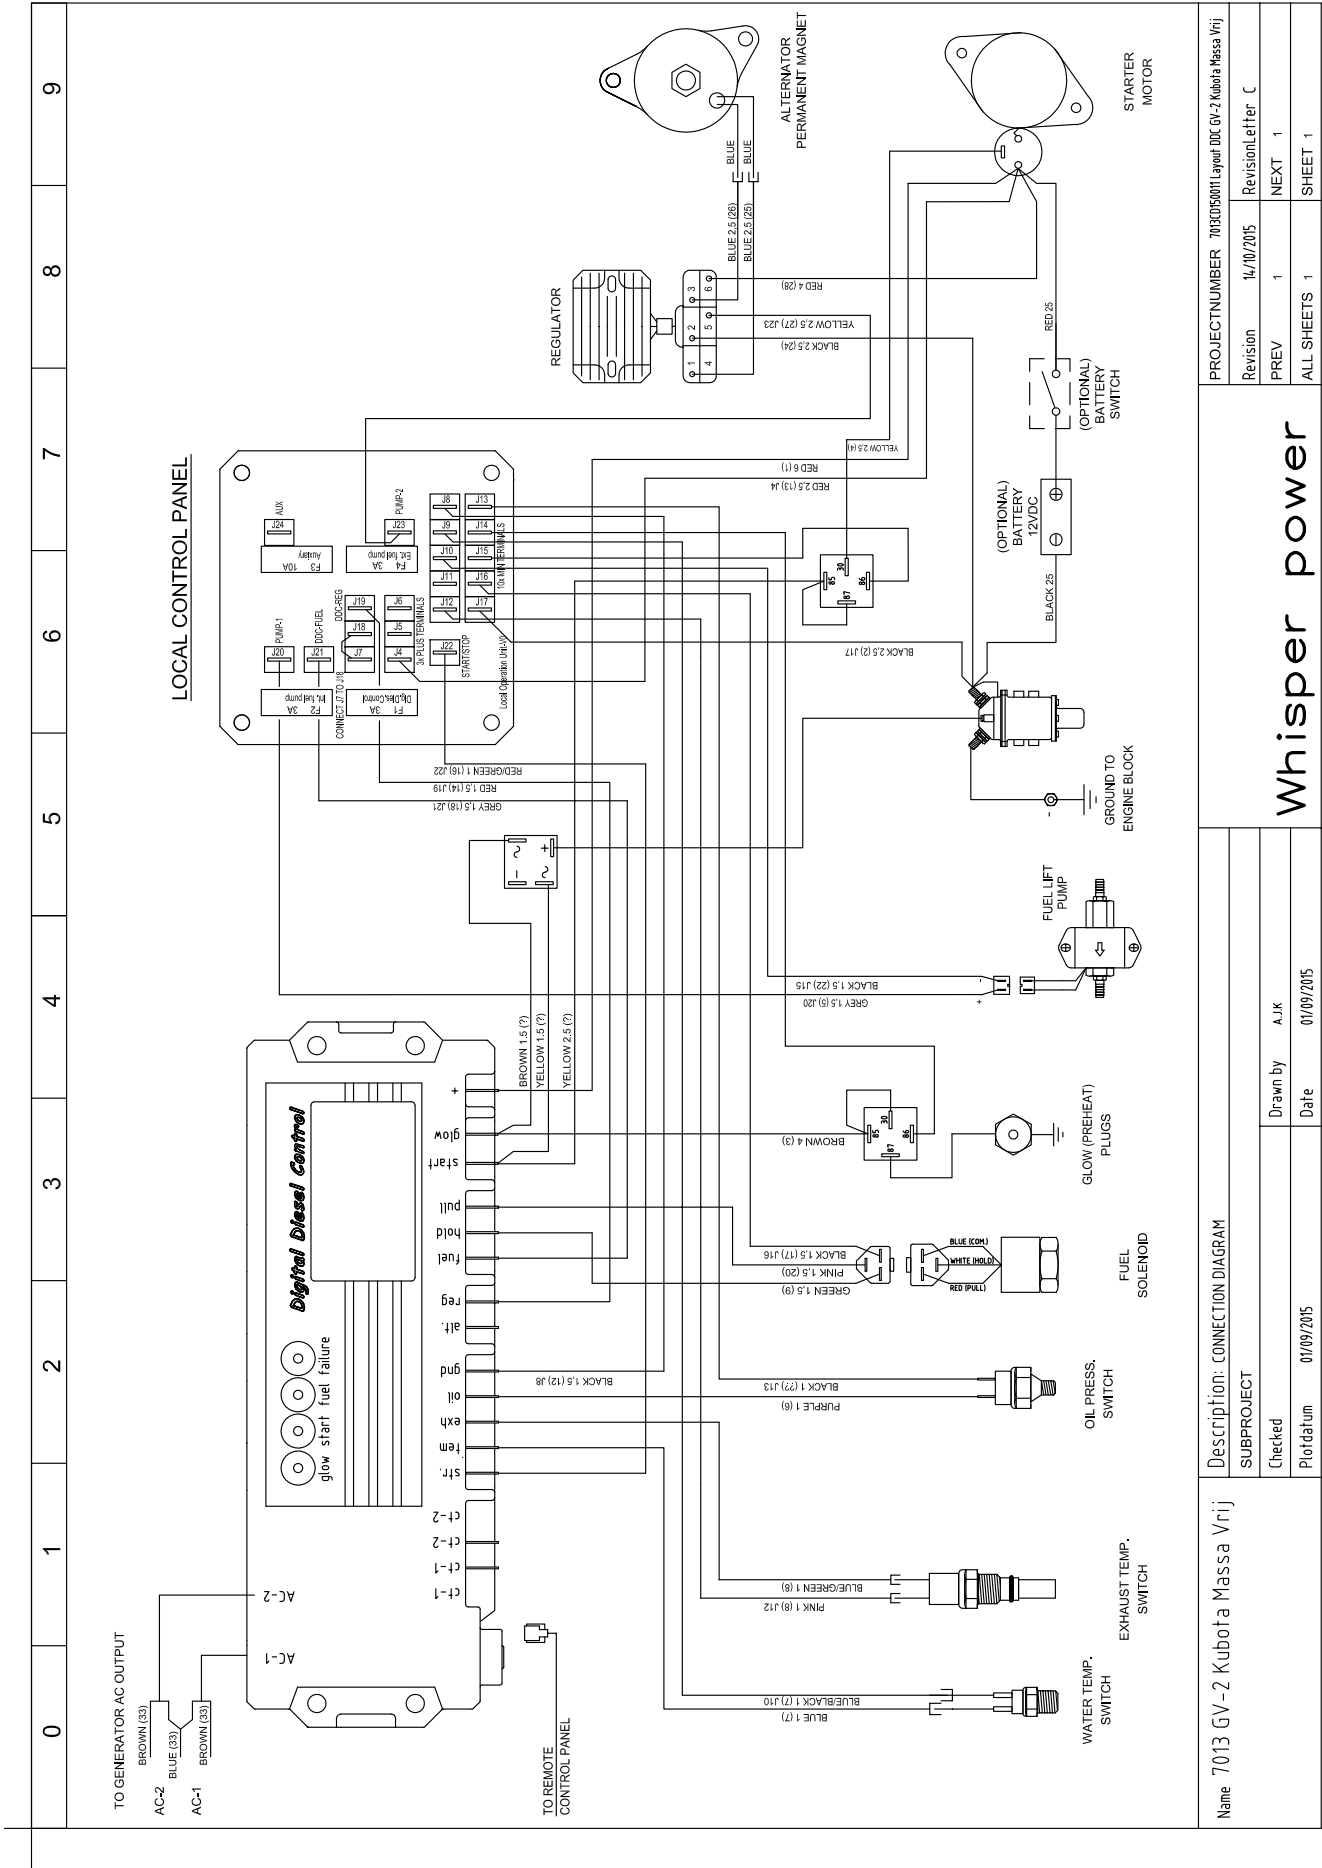

## 5.2 MECHANICAL DRAWINGS


- 1 Exhaust: 1" Thread
- 2 To expansion tank
- 3 AC Power 4G4
- 4 AC Sense 4G2.5
- 5 Water in (cold) hose 25 mm
- 6 Fuel out 8mm
- 7 Fuel in 8mm
- 8 Battery + "Red" 25mm<sup>2</sup>
- 9 Battery - "Black" 25mm<sup>2</sup>
- 10 Water out (hot) hose 25 mm
- 11 Air Filter housing
- 12 Fuel line injector
- 13 Fuel injection pump
- 14 Oil Filler cap
- 15 Thermostat cover

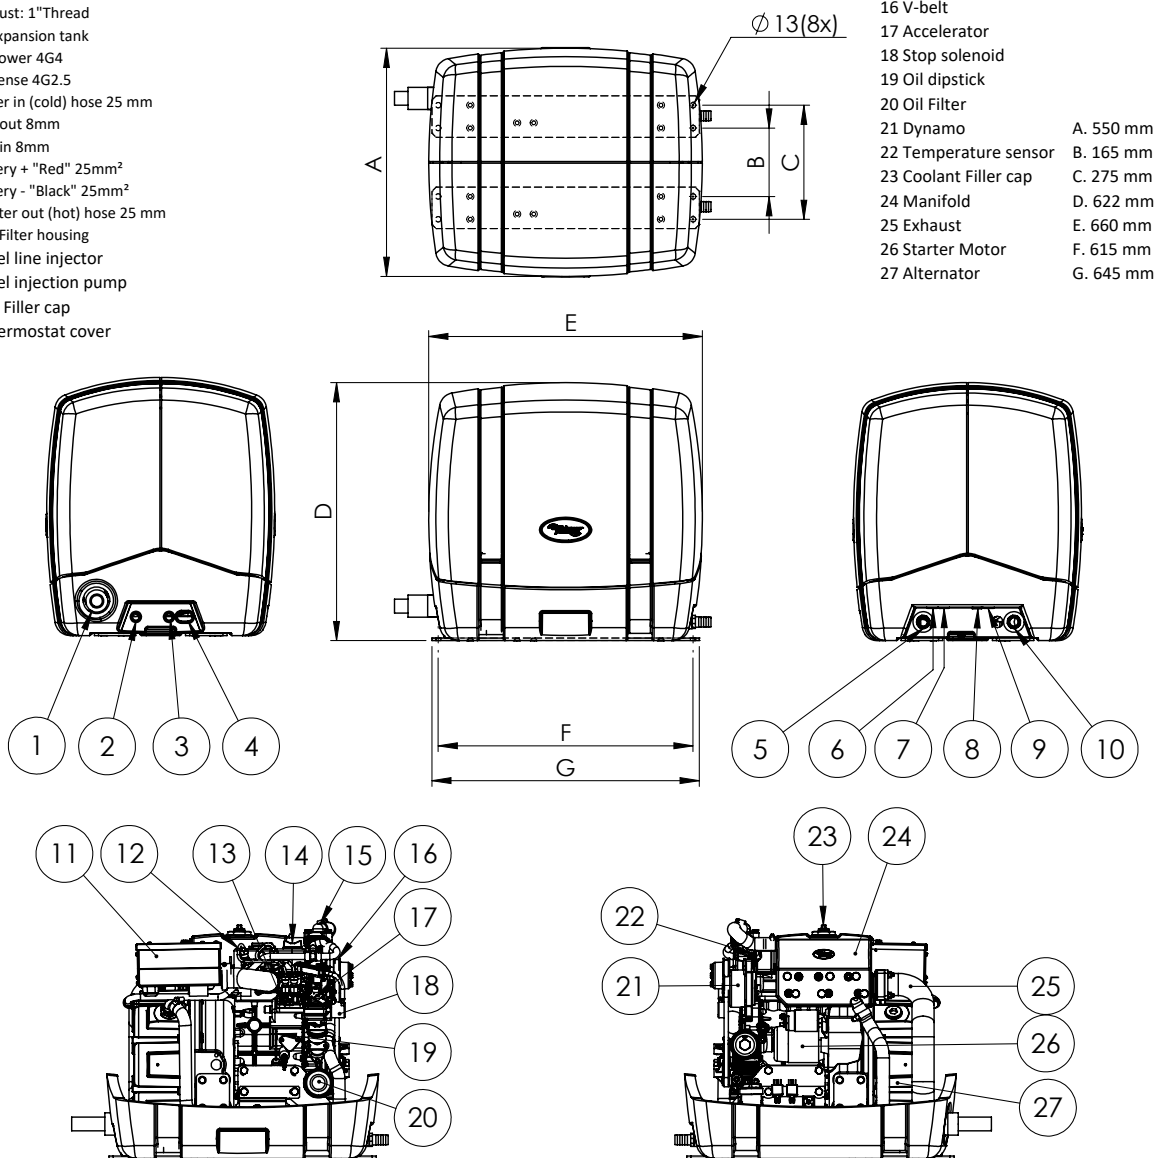

Polyester Canopy: Panels Ral 9010 Bottom: AE80104123621 BLACK Mass: 154 kg				49001120 Elite GV 2 24 VDC - 150 A or 48 VDC / 80 A - Kubota 60202002 DC PowerCube 24/150 60202003 DC PowerCube 48/80	
49005420 Elite 8 MOBILE 230 V / 50 Hz - Kubota Z482 engine 49005425 Elite 8 MOBILE 120 V / 60 Hz - Kubota Z482 engine 49005480 Elite Twin 8+8 GRP Sound Shield					
UNLESS OTHERWISE SPECIFIED: CHAMFER SHARP EDGES GENERAL TOLERANCE NEN ISO 2768-m FORM AND PLACE TOLERANCES NEN-ISO 1101 WELDING SYMBOL NEN EN 22553 ROUGHNESS ACC. to NEN3634		TOLERANCE PRINCIPLE ISO 8015  PROJECTION : THIRD ANGLE UNITS : mm	FINISH: -  Material:	DO NOT SCALE DRAWING	
				SHEET FORMAT:	
				A4	
				TITLE:	Elite 2+8
		NAME	SIGNATURE	DATE	STATUS: Released
		DRAWN	M.B.	16-10-2017	
		CHK'D	M.B.	13-02-2020	DRAWING: 7043A184284
		PRINTED		2-6-2020	ARTICLE NO. NOT REQUIRED
				Weight: 170370.49 gram	REVISION
				SCALE:1:14	SHEET 1 OF 4


Figure 30: Elite GV 2 and Elite GV 8

- 1 Exhaust: 1" Thread
- 2 To expansion tank
- 3 AC Power 4G4
- 4 AC Sense 4G2.5
- 5 Water in (cold) hose 25 mm
- 6 Fuel out 8mm
- 7 Fuel in 8mm
- 8 Battery + "Red" 25mm<sup>2</sup>
- 9 Battery - "Black" 25mm<sup>2</sup>
- 10 Water out (hot) hose 25 mm
- 11 Air Filter housing

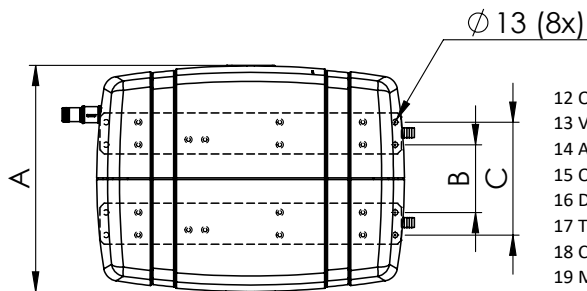

- 12 Oil Filler cap
- 13 V-belt
- 14 Accelerator
- 15 Oil Filter
- 16 Dynamo
- 17 Temperature sensor
- 18 Coolant Fill
- 19 Manifold
- 20 Exhaust
- 21 Starter Motor


- A. 550 mm
- B. 165 mm
- C. 275 mm
- D. 620 mm
- E. 740 mm
- F. 695 mm
- G. 725 mm

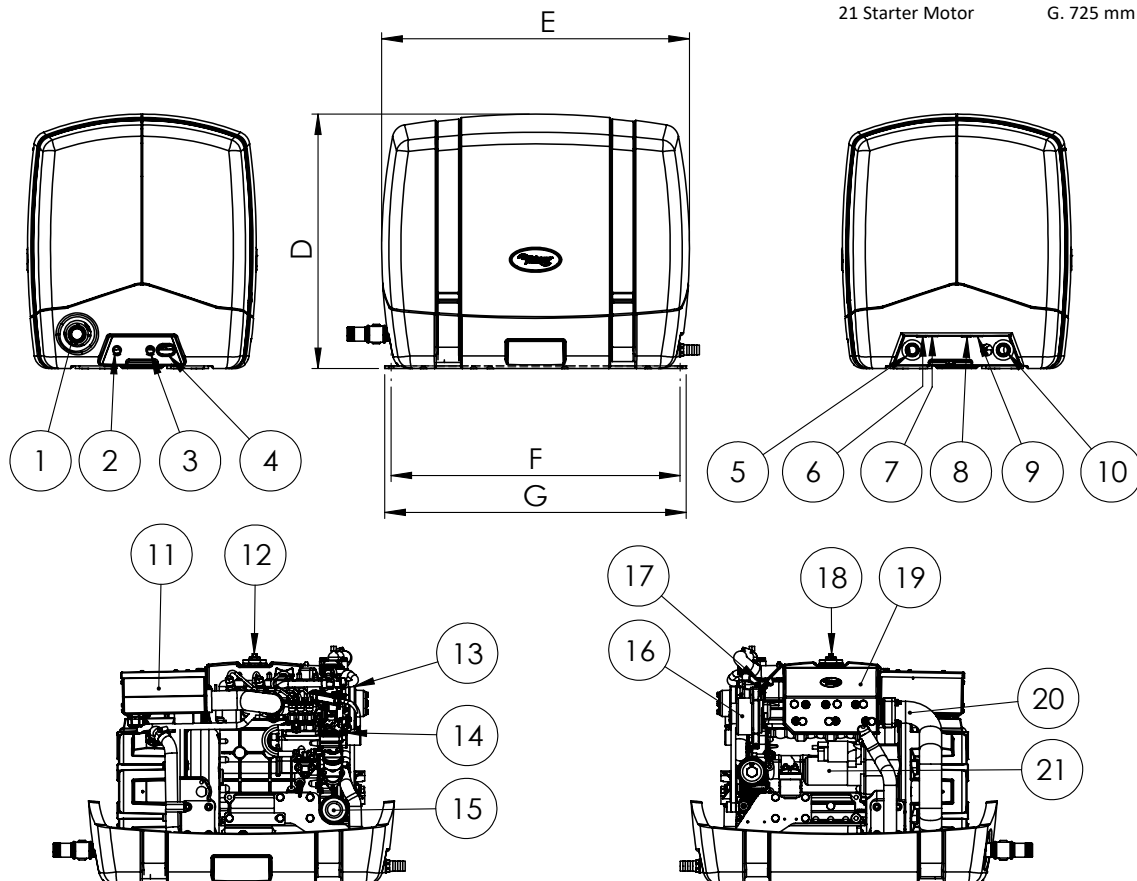


Polyester Canopy: Panels Ral 9010 Bottom: AE80104123621 BLACK Mass: 175 kg				49001320 Elite GV 3 24 VDC - 300 A or 48 VDC - 160 A - Kubota D722 Engine 60202002 DC PowerCube 24/150 or 60202003 DC PowerCube 48/80			
49009420 Elite 10 MOBILE 230 V / 50 Hz Kubota D722 Engine 49009425 Elite 10 MOBILE 120 V / 60 Hz Kubota D722 Engine 49009480 Elite Twin 10+10 GRP Sound Shield Kubota D722 Engine				49006020 Elite 12 MOBILE 230 V / 50 Hz Kubota D722 Engine 49006025 Elite 12 MOBILE 120 V / 60 Hz Kubota D722 Engine 49006480 Elite Twin 12+12 GRP Sound Shield Kubota D722 Engine			
UNLESS OTHERWISE SPECIFIED: CHAMFER SHARP EDGES GENERAL TOLERANCE NEN ISO 2768-m FORM AND PLACE TOLERANCES NEN-ISO 1101 WELDING SYMBOL NEN EN 22553 ROUGHNESS ACC. to NEN3634		TOLERANCE PRINCIPLE ISO 8015 PROJECTION : THIRD ANGLE UNITS : mm		FINISH: - Material:		DO NOT SCALE DRAWING SHEET FORMAT: <b>A4</b> TITLE: <b>Elite 3 + 10 + 12</b>	
NAME M.B.		SIGNATURE M.B.		DATE 16-10-2017 7-10-2020		STATUS: <b>Released</b>	
PRINTED M.B.		DATE 17-5-2022		DRAWING: 7044A184624		ARTICLE NO. <b>NOT REQUIRED</b>	
Weight: 0.00 gram		SCALE: 1:15		SHEET 1 OF 1		REVISION	

Figure 31: Elite GV 3, 10 and Elite GV 12

- 1 Exhaust: 1-1/2" Thread
- 2 To expansion tank
- 3 AC Power 5G6
- 4 AC Sense 4G2.5
- 5 Water in (cold) hose 25 mm
- 6 Fuel out 8mm
- 7 Fuel in 8mm
- 8 Battery + "Red" 25mm<sup>2</sup>
- 9 Battery - "Black" 25mm<sup>2</sup>
- 10 Water out (hot) hose 25 mm
- 11 Air Filter housing
- 12 Oil dipstick
- 13 Injector
- 14 Stop solenoid
- 15 Injection pump
- 16 Oil Filler cap
- 17 V-belt
- 18 Speed control lever
- 19 Manual lift pump
- 20 Manual stop lever
- 21 Oil Filter
- 22 Oil pressure switch
- 23 Dynamo
- 24 Thermostatic cover
- 25 Temperature sensor
- 26 Coolant Filler cap
- 27 Manifold
- 28 Exhaust
- 29 Starter Motor
- 30 Alternator

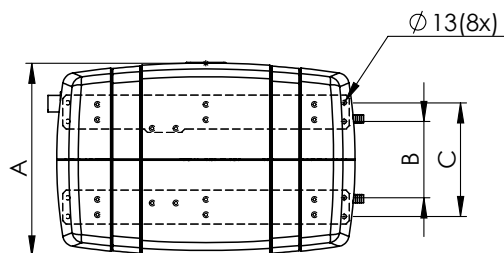

- A. 570 mm  
B. 225 mm  
C. 335 mm  
D. 690 mm  
E. 880 mm  
F. 815 mm  
G. 845 mm

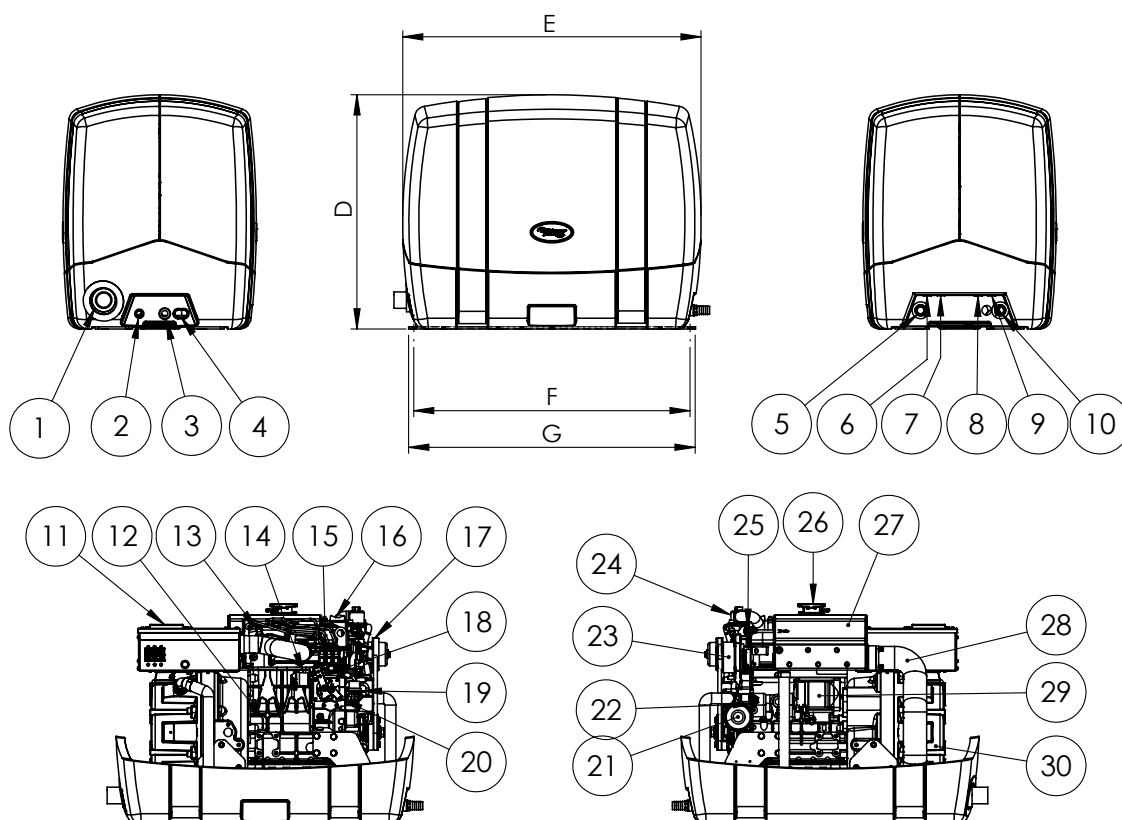



Polyester Canopy: Panels Ral 9010 Bottom: AE80104123621 BLACK Mass: 210 kg				49001520 Elite GV 3 Plus 24 VDC - 450 A or 48 VDC - 240 A 60202003 DC PowerCube 48 V - 80 A	
				49007020 Elite 15 MOBILE 230 V / 50 Hz Kubota D1105 Engine 49007025 Elite 15 MOBILE 120 V / 60 Hz Kubota D1105 Engine 49007480 Elite Twin 15+15 GRP Sound Shield Kubota D1105 Engines	
UNLESS OTHERWISE SPECIFIED: CHAMFER SHARP EDGES GENERAL TOLERANCE NEN ISO 2768-m FORM AND PLACE TOLERANCES NEN-ISO 1101 WELDING SYMBOL NEN EN 22553 ROUGHNESS ACC. to NEN3634		TOLERANCE PRINCIPLE ISO 8015		DO NOT SCALE DRAWING	
		FINISH: -			
		PROJECTION : THIRD ANGLE UNITS : mm			
		Material:			
				A4	
				TITLE:	
				Elite 3 Plus & 15	
	NAME	SIGNATURE	DATE	STATUS:	
DRAWN	M.B.		16-10-2017	Released	
CHK'D	M.B.		24-12-2020		
				DRAWING:	
PRINTED			24-12-2020	7047A195357	ARTICLE NO.  NOT REQUIRED
				Weight: 97721.40 gram	REVISION
				SCALE:1:18	
				SHEET 3 OF 3	

Figure 32: Elite 3+ and Elite GV 15





Kelvinlaan 82, 9207 JB Drachten, Netherlands  
[www.whisperpower.com](http://www.whisperpower.com) / [sales@whisperpower.com](mailto:sales@whisperpower.com)